

# VENUS ARIS

A104 A131 A310

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL

LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES

تاميلعت






16x  
WA 020




16x  
WA 021




14x  
WA 022




2x  
WA 031




2x  
WA 023



2x  
WA 024



2x  
WA 025




2x  
WA 026



2x  
WA 027




2x  
WA 028

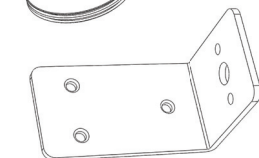




1x  
AV 100

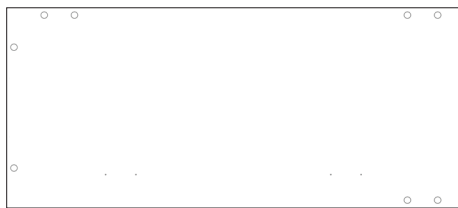

1x  
AV 101



1x  
AV 102

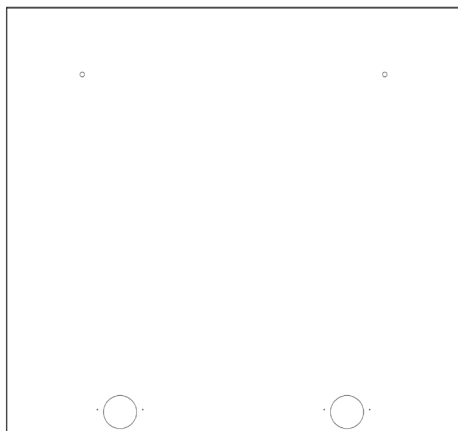


1x  
AV 105



1x  
AV 103




2x  
AV 104





1x  
AV 106

16x


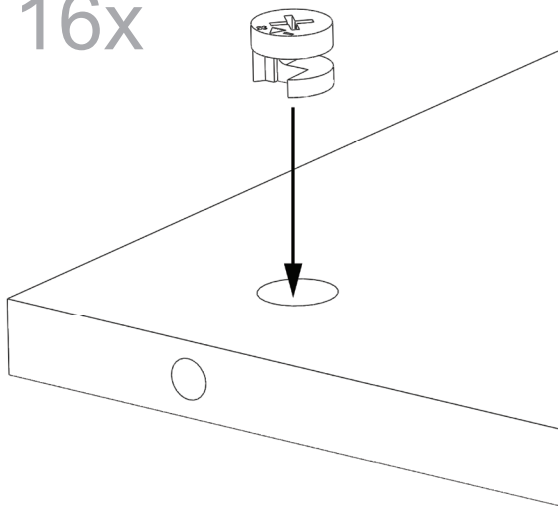



!

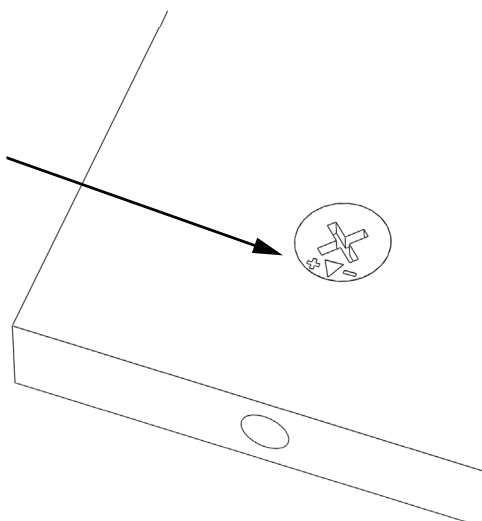



16x

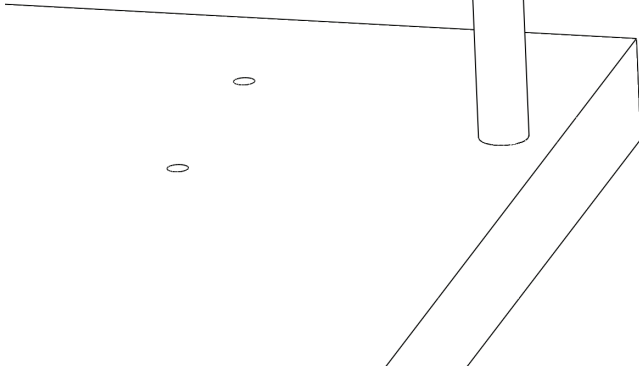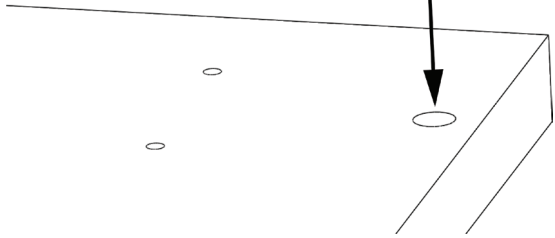

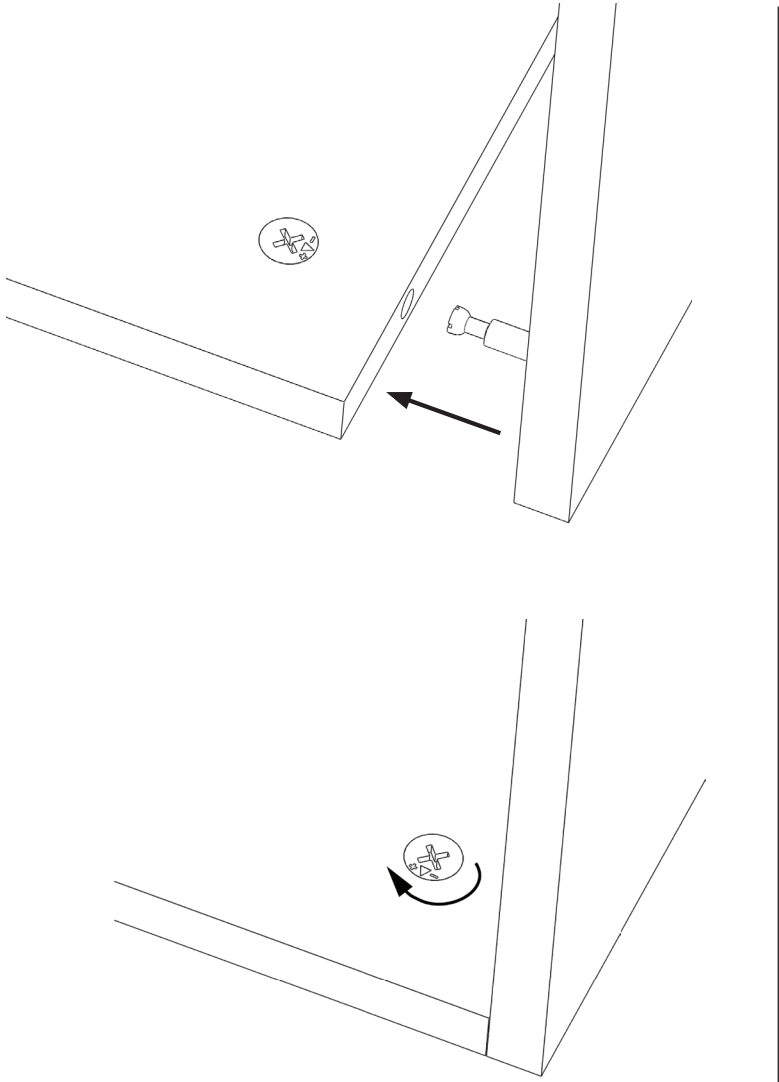

ZUSAMMENBAU

ASSEMBLY



ASSEMBLAGE

ASAMBLEA


MONTAJ

MONTAGEM

تجميع

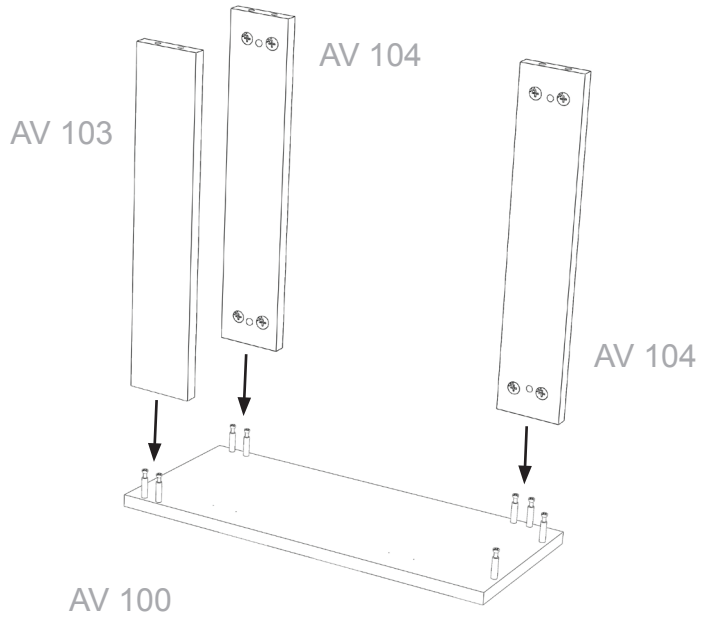



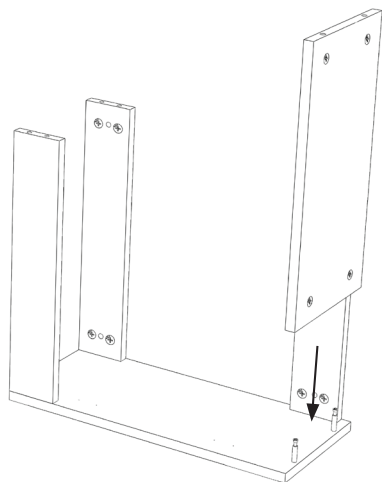


AV 102


2/13




AV 101

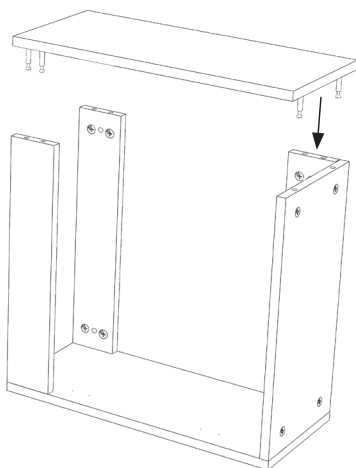


3/13





2x  
WA 028

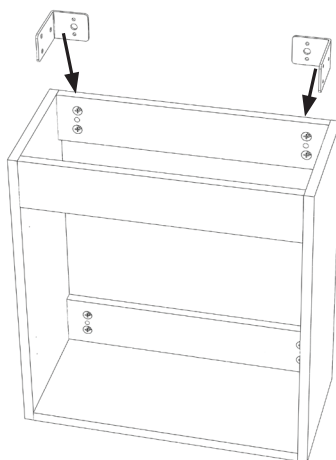


4/13

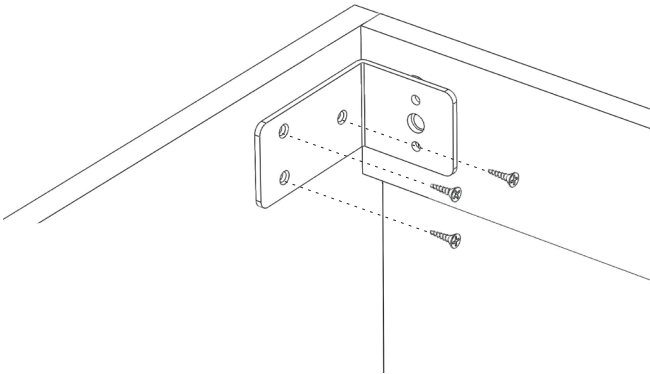

5/13



6x  
WA 022

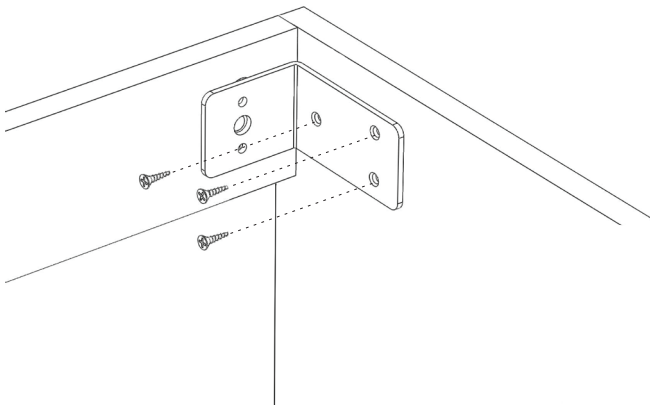

6/13

WANDMONTAGE

WALL MOUNT




MONTAGE AU MUR

DE MONTAJE EN PARED


DUVARA MONTAJ


PAREDE MONTAGEM

لښج راډج

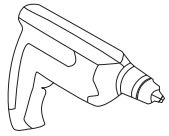


4x  
WA 025

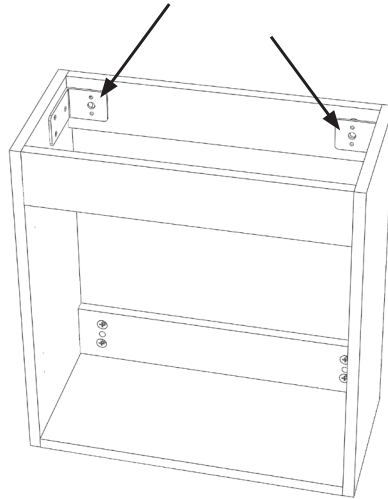


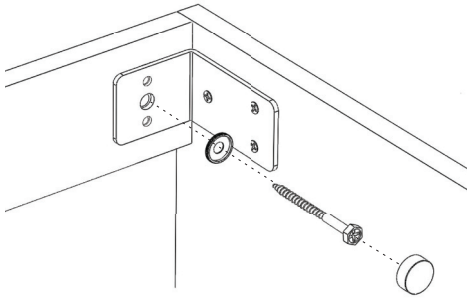

7/13

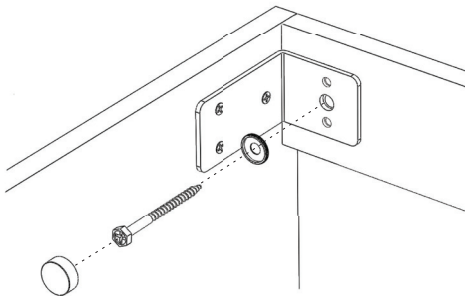

8/13




2x  
WA 024



2x  
WA 026




2x  
WA 027




SILIKON  
SILICONE  
SILICONA



نوكيليس

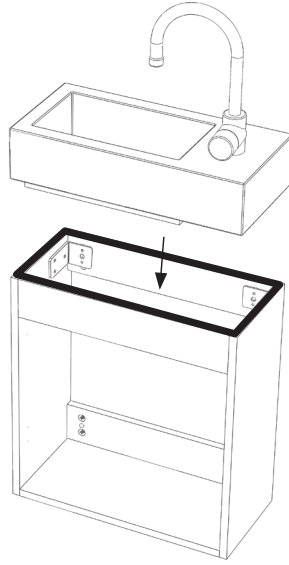



9/13

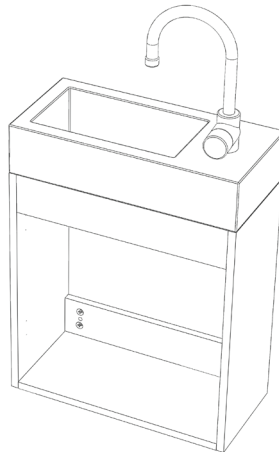

10/13

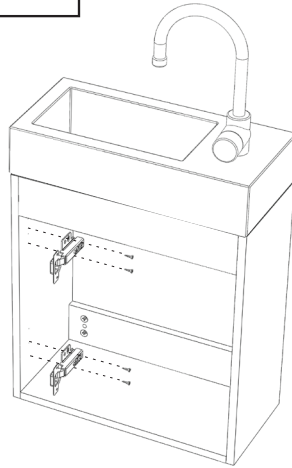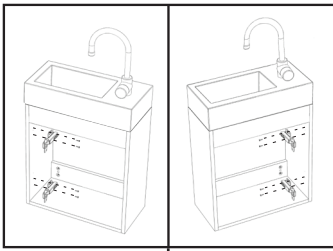



11/13





2x  
WA 031



8x  
WA 022

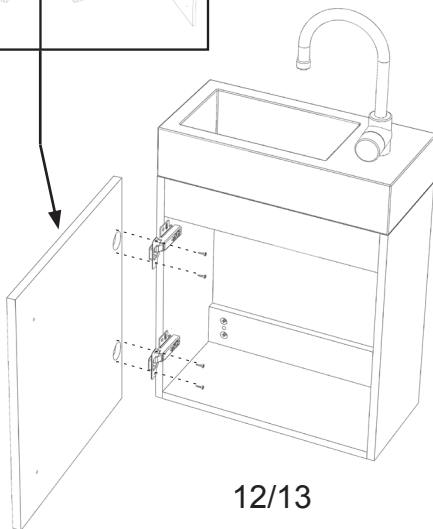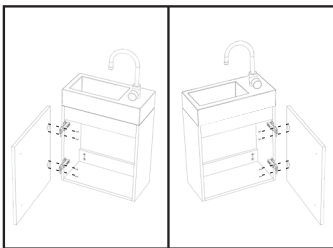


12/13

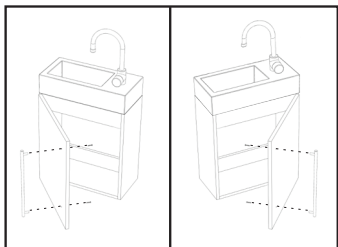

2x  
WA 023

AV 106

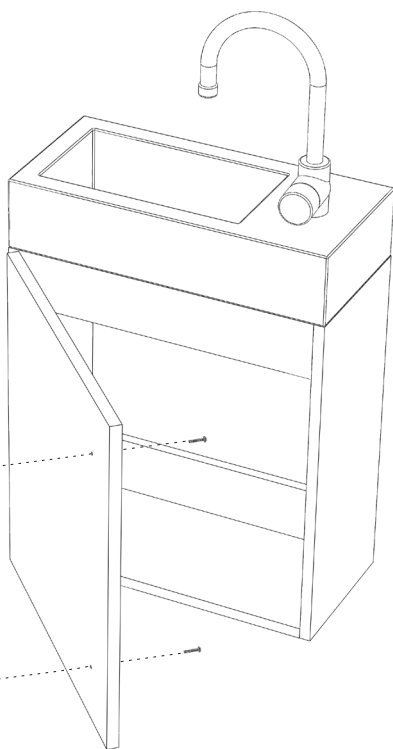

13/13