

# A199

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL


LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES

تامی لعت

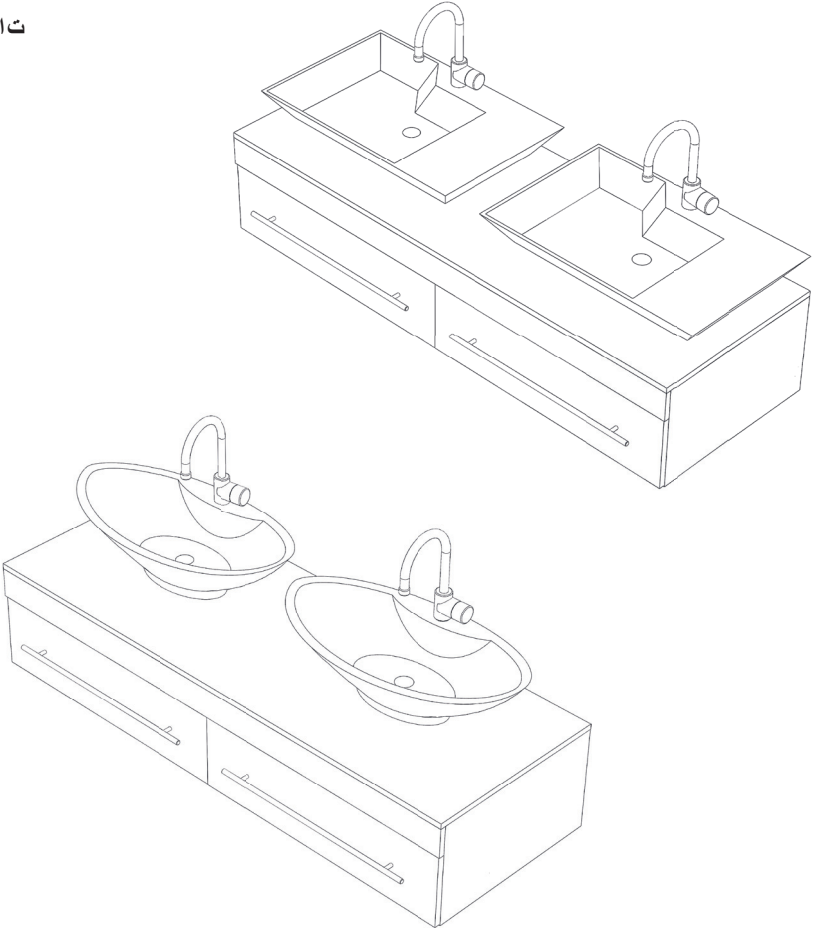


47x  
WA 020




47x  
WA 021




34x  
WA 022




4x  
WA 023




6x  
WA 024



6x  
WA 025

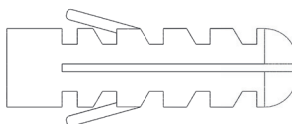


6x  
WA 026

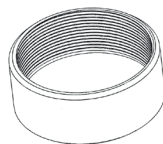

6x  
WA 027




4x  
WA 028

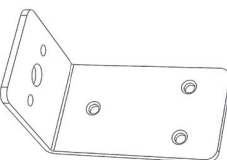


9x  
WA 030




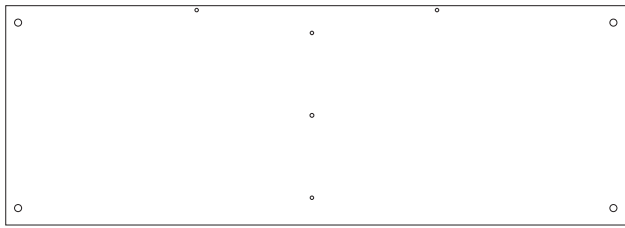

1x  
CL 001

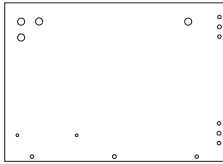

1x  
CL 002

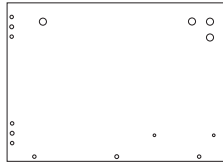

1x  
CL 003




1x  
CL 004



1x  
CL 005



2x  
CL 006

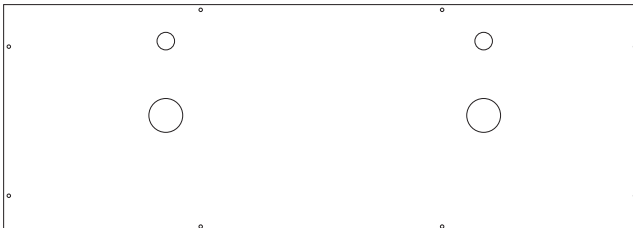

1x  
CL 007



1x  
CL 008 L



1x  
CL 009 R



2x  
CL 010




2x  
CL 011




2x  
CL 012




2x  
CL 013



2x  
CL 014




2x  
CL 015 L




2x  
CL 016 R

47x

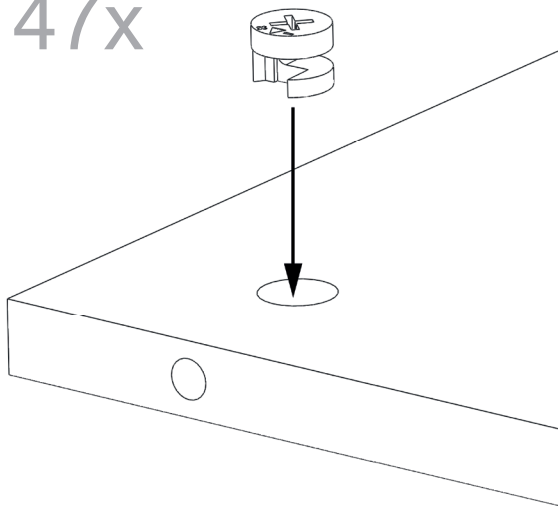




!

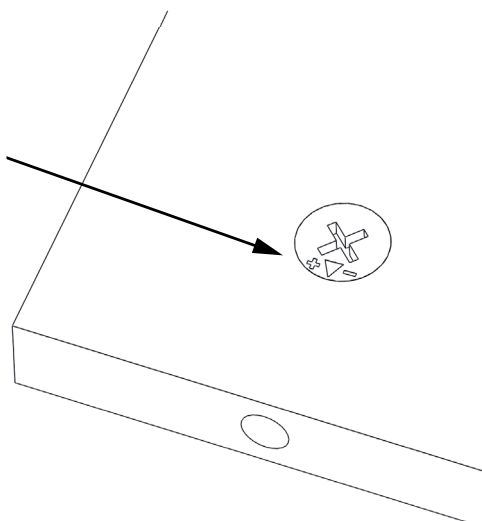



47x

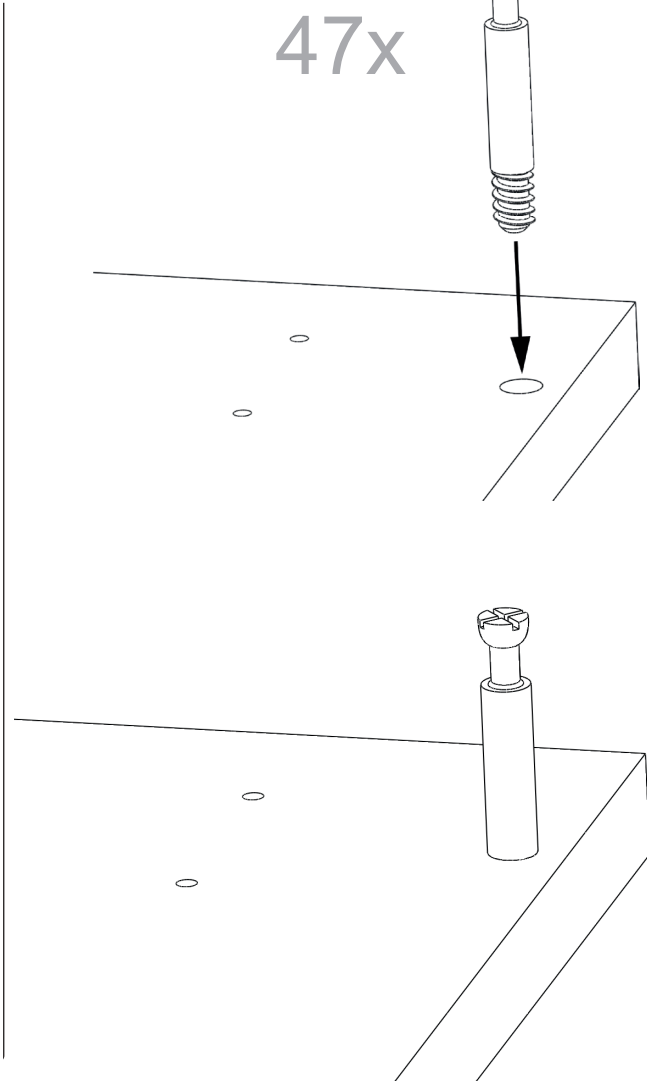

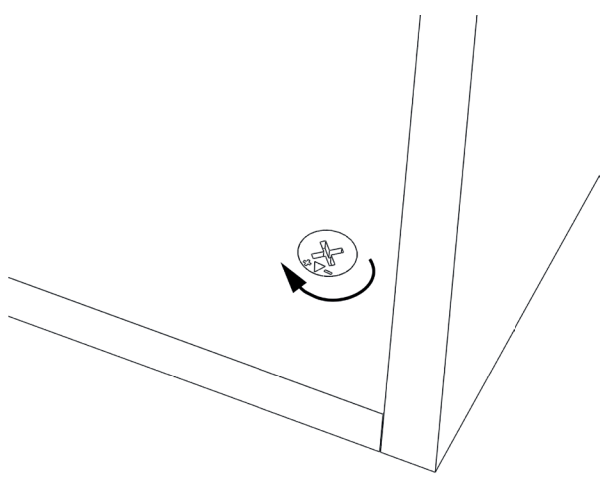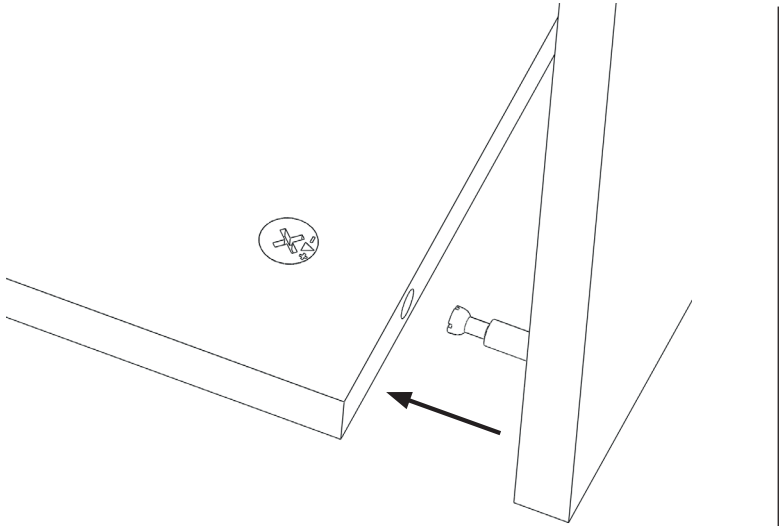

ZUSAMMENBAU

ASSEMBLY


ASSEMBLAGE

ASAMBLEA

MONTAJ


MONTAGEM

تجميع




3x  
WA 030

CL 004

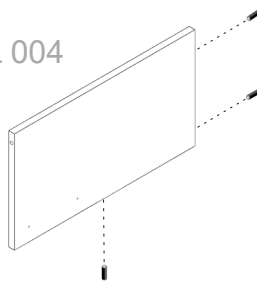

1/33


CL 004

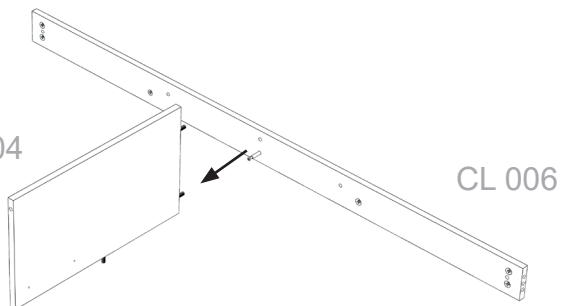


CL 006

2/33




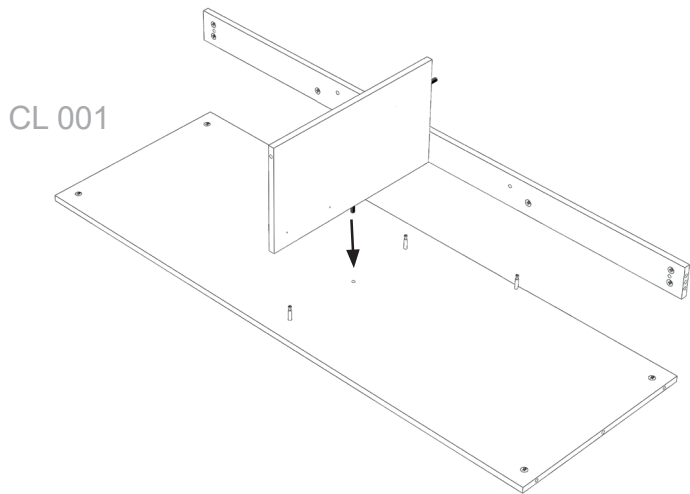


3/33

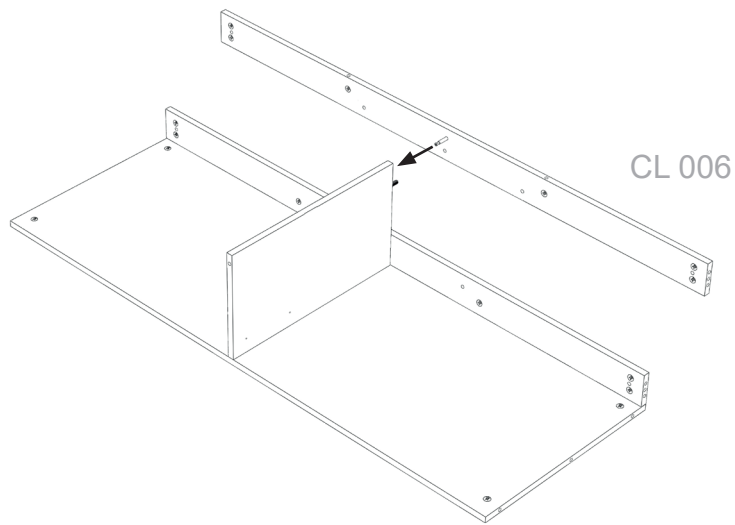


4/33

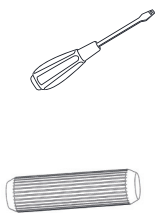

6x  
WA 030

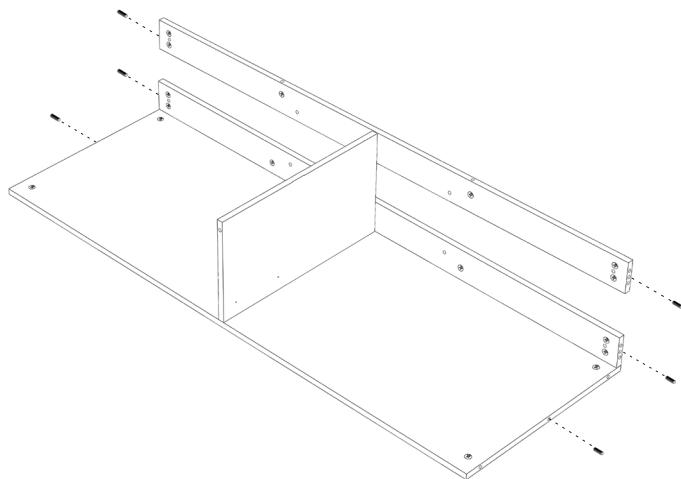


5/33

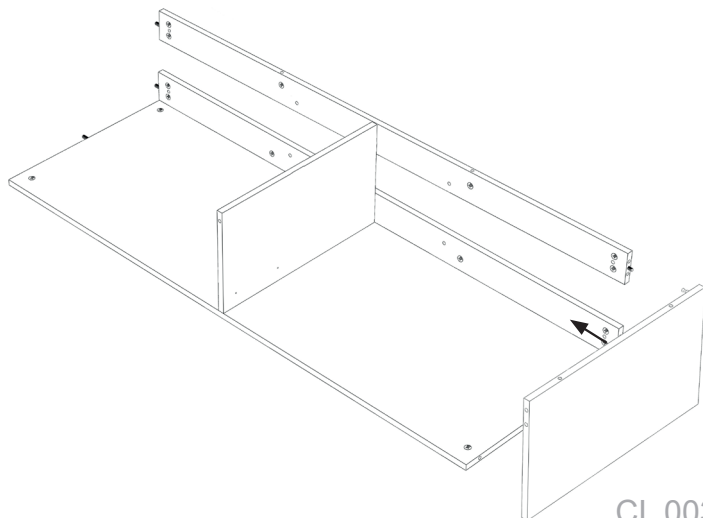



CL 003

6/33



CL 002

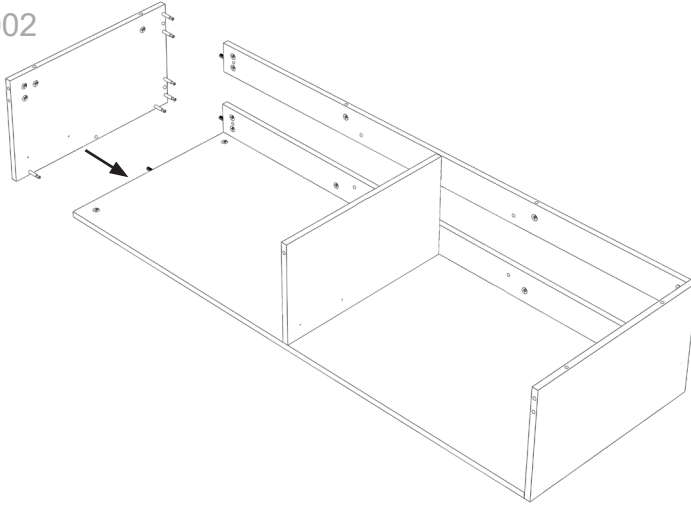


7/33

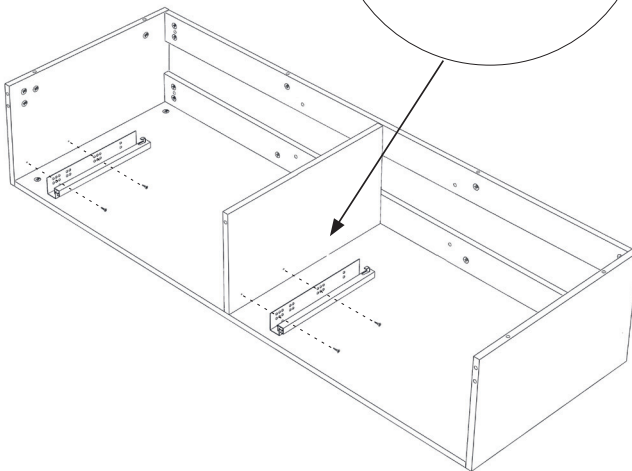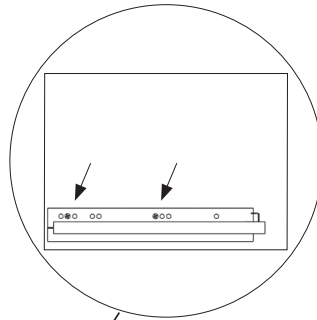





8/33



2x  
CL 015 L




4x  
WA 022

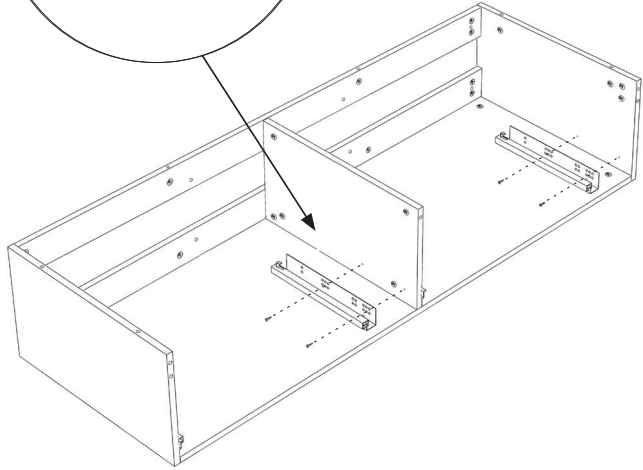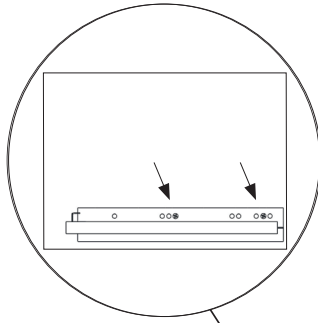


2x  
CL 016 R

9/33






4x  
WA 022

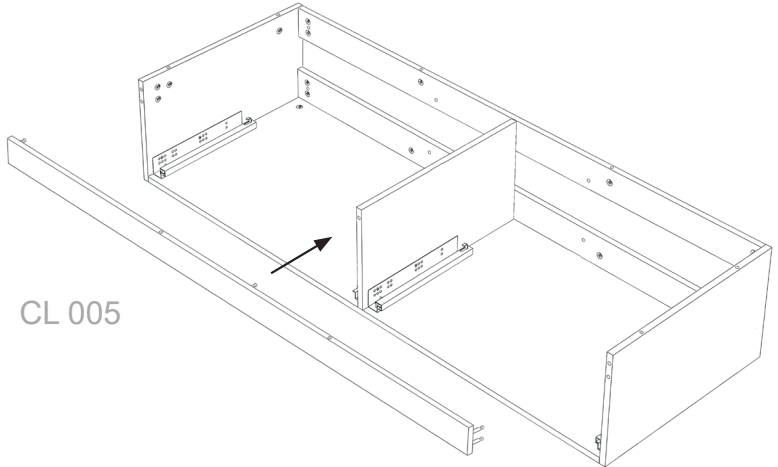


CL 005

10/33

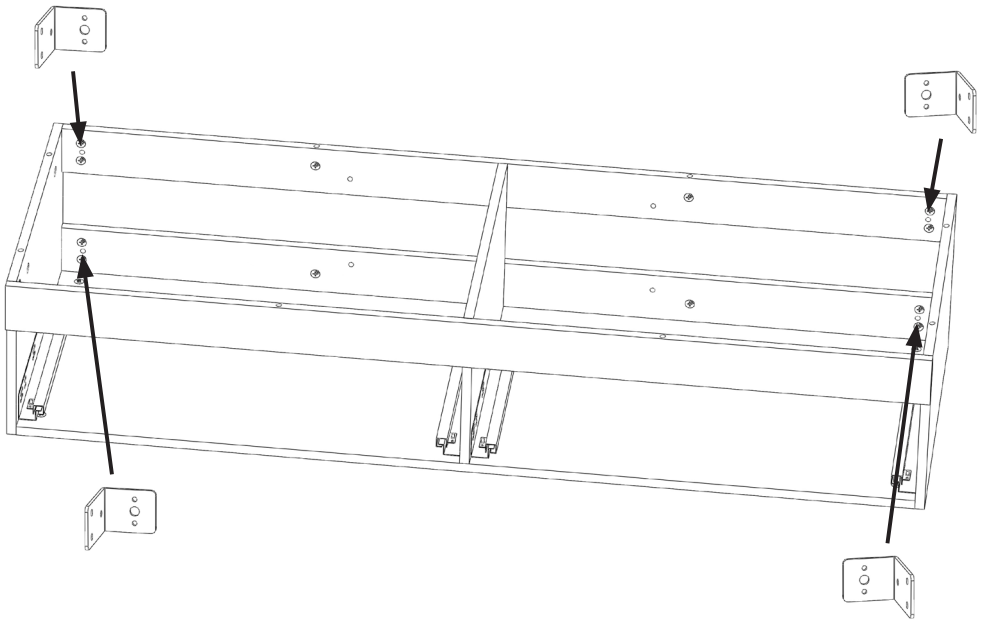





6x  
WA 022




2x  
WA 028

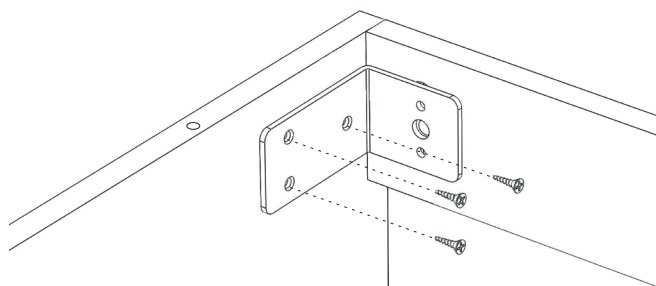


11/33

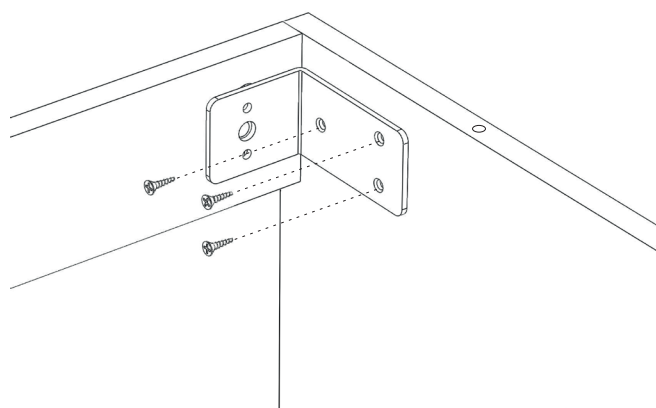


12/33

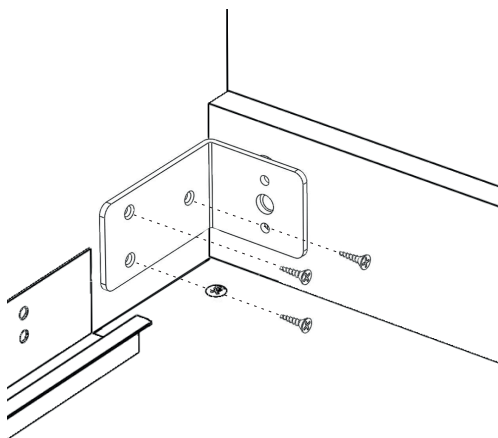


13/33

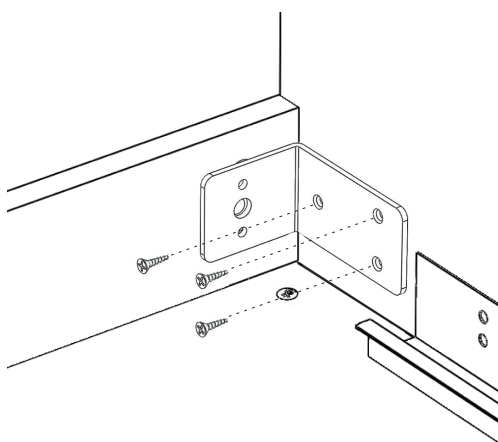

14/33






6x  
WA 022




2x  
WA 028

**WANDMONTAGE**  
**WALL MOUNT**  
**MONTAGE AU MUR**  
**DE MONTAJE EN PARED**  
**DUVARA MONTAJ**  
**PAREDE MONTAGEM**


لېج رادج

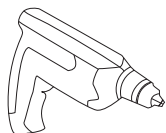


6x  
WA 025

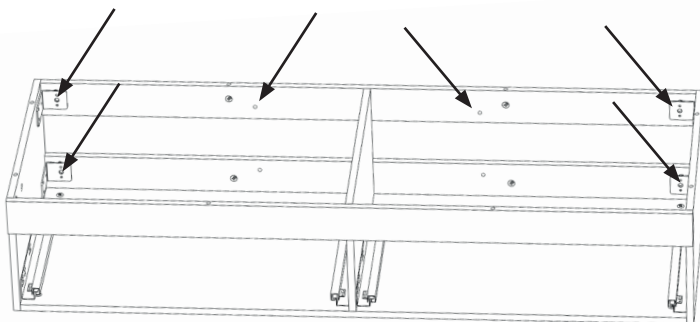




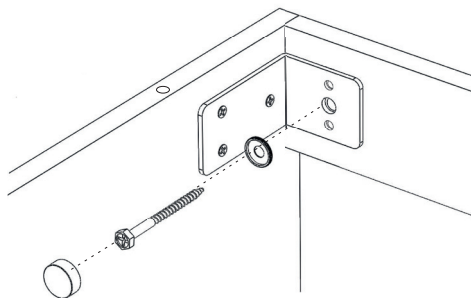

15/33

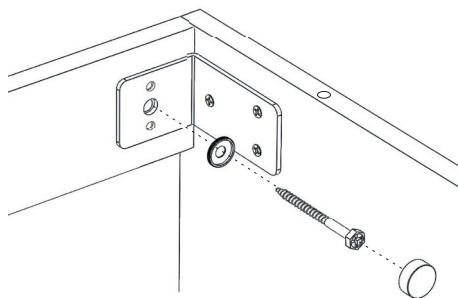

16/33



2x  
WA 024



2x  
WA 026



2x  
WA 027




2x  
WA 024





2x  
WA 026



2x  
WA 027

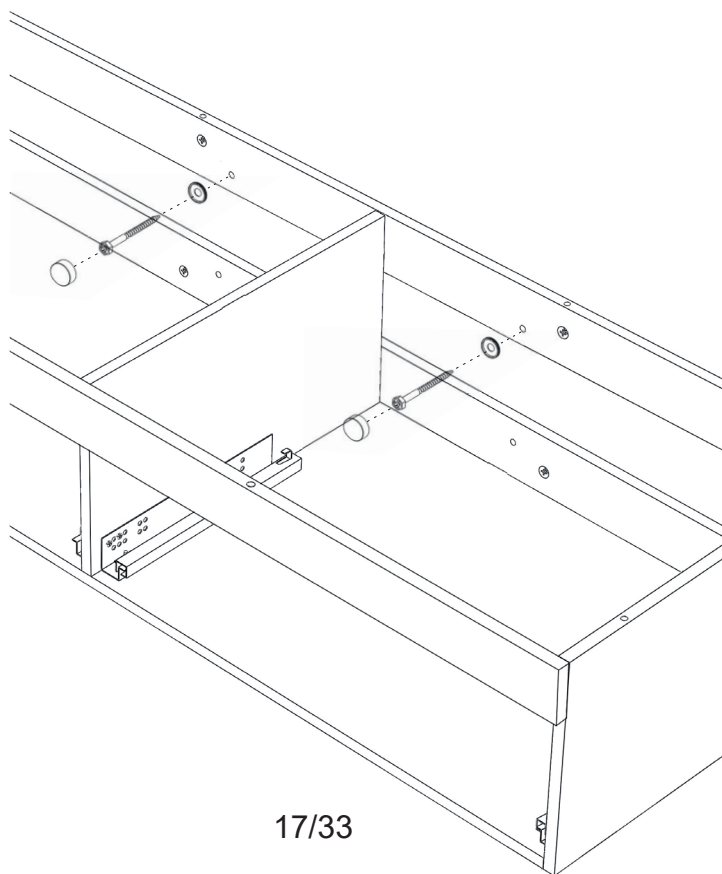

17/33

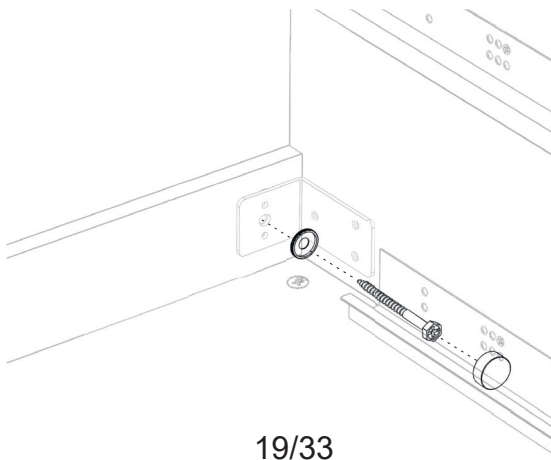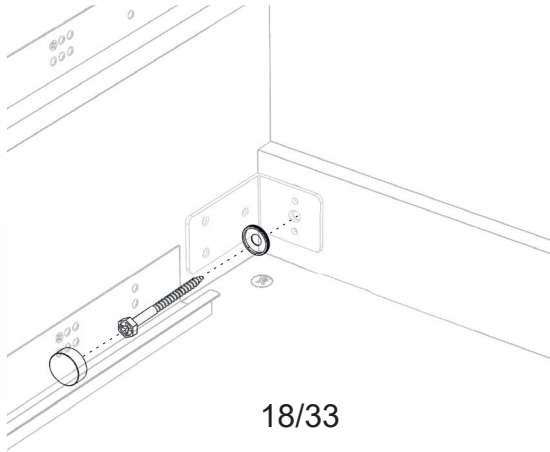


2x  
WA 024




2x  
WA 026



2x  
WA 027




4x  
WA 023

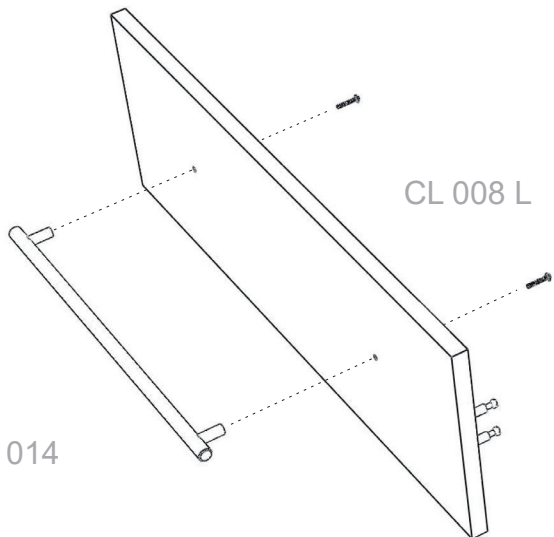

CL 014

CL 008 L




20/33


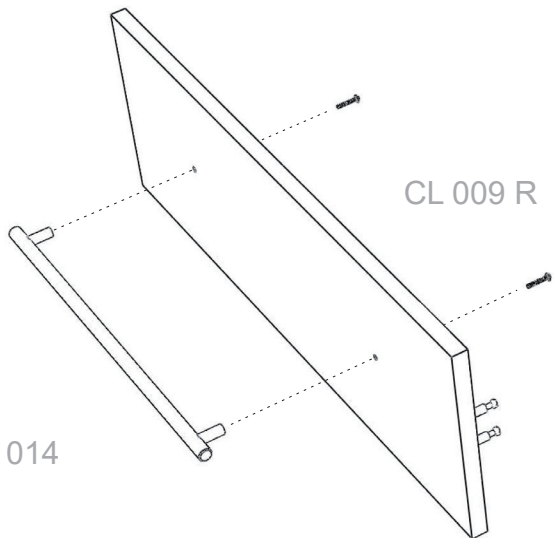


CL 014


CL 009 R

21/33

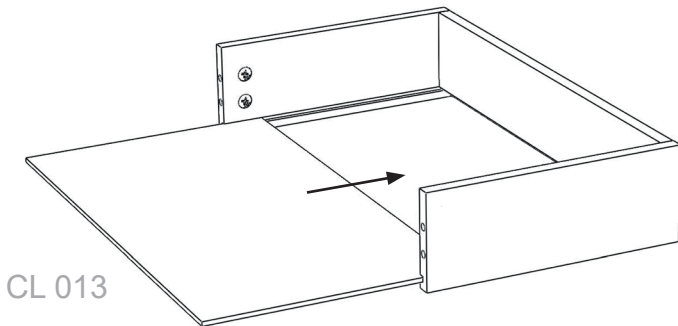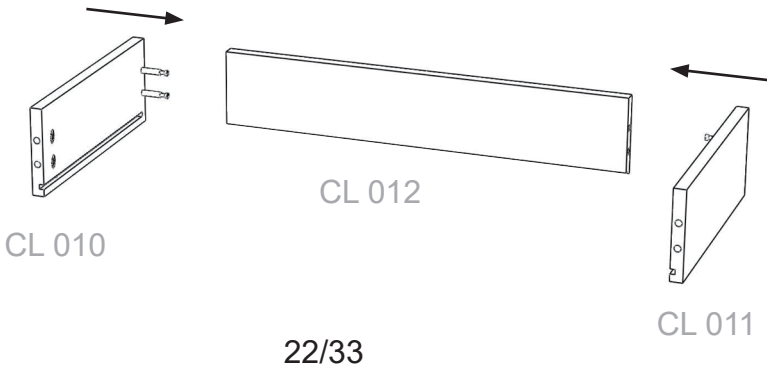




3x  
WA 022


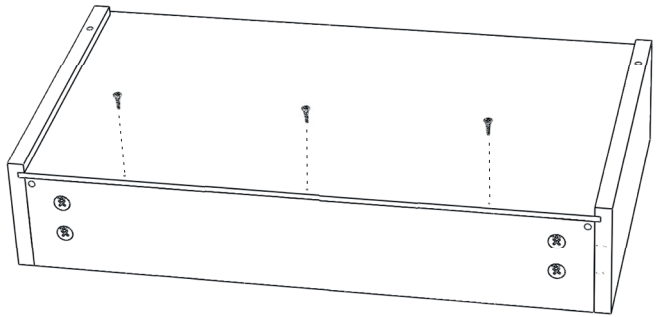



24/33

CL 008 L

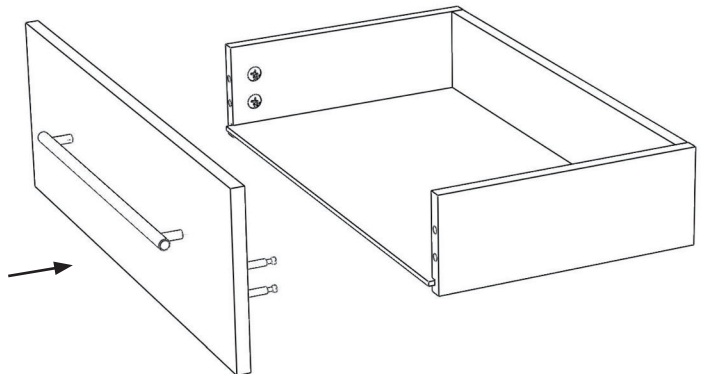


25/33

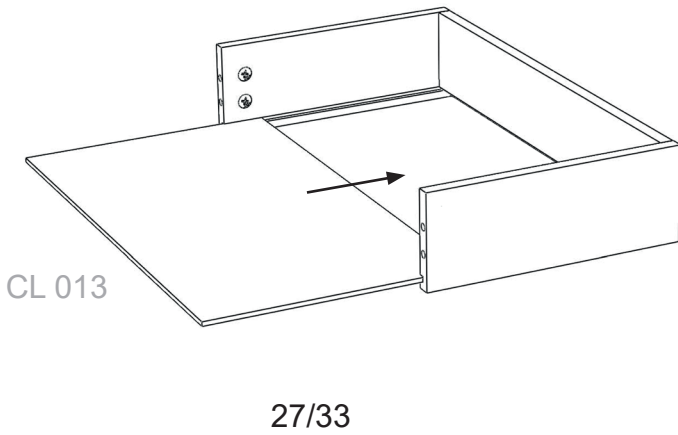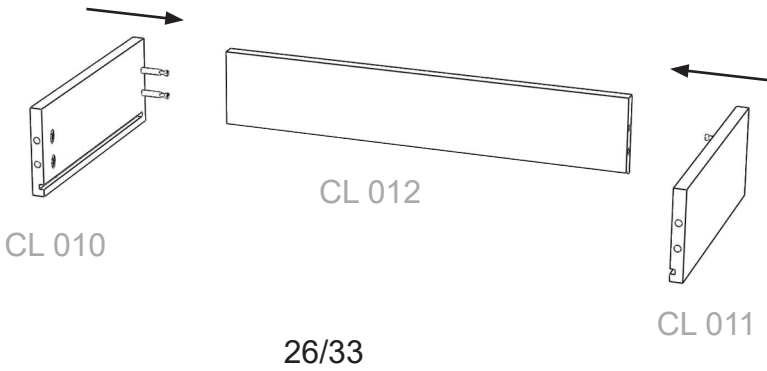




3x  
WA 022

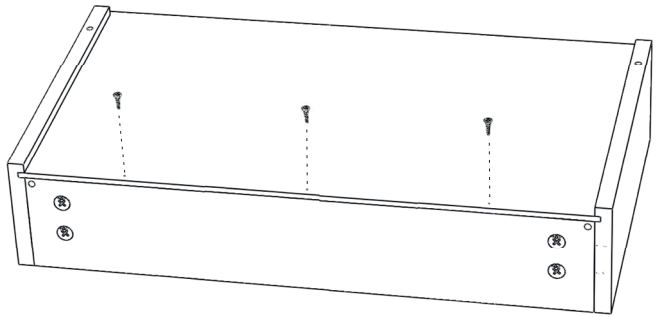



28/33

CL 009 R

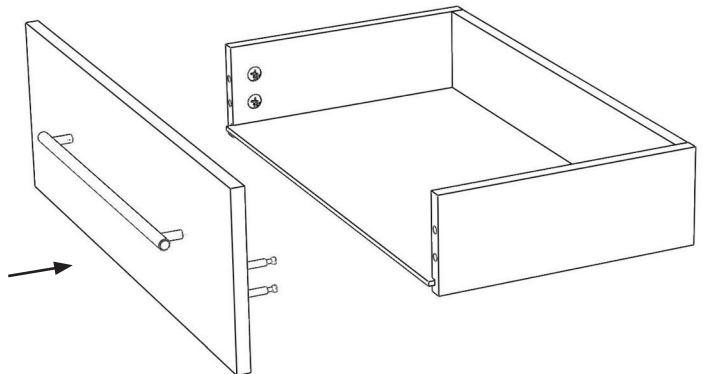


29/33




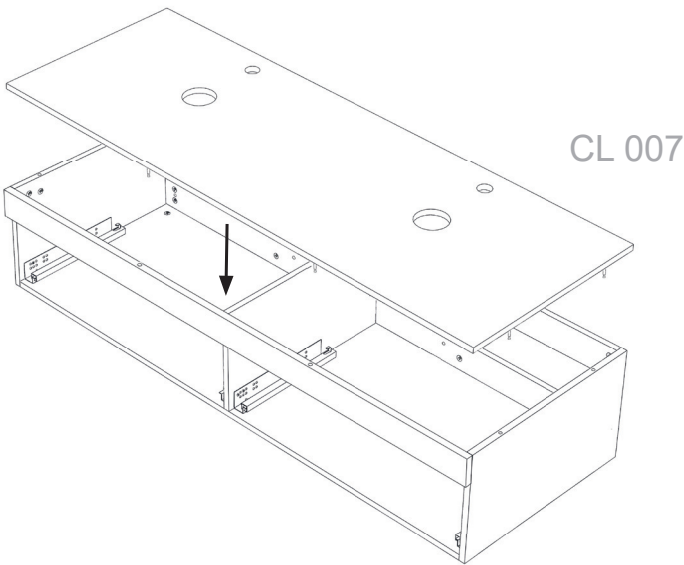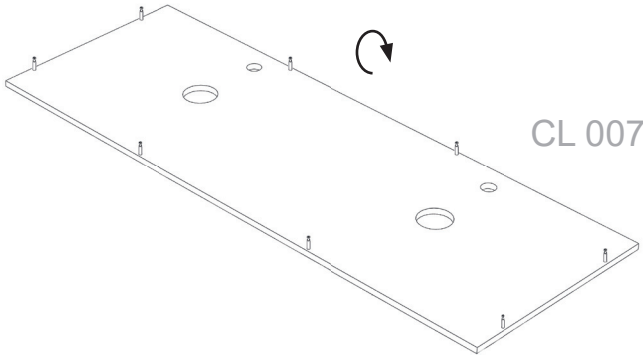


CLASSICO XL

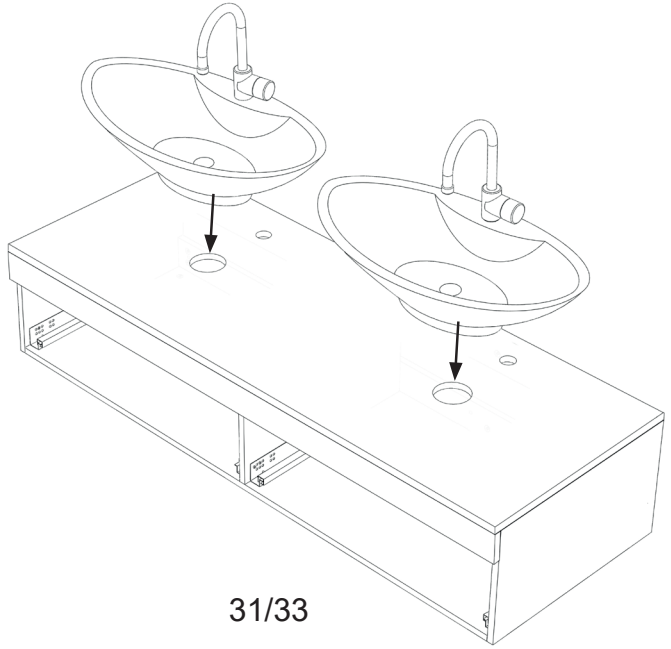

31/33

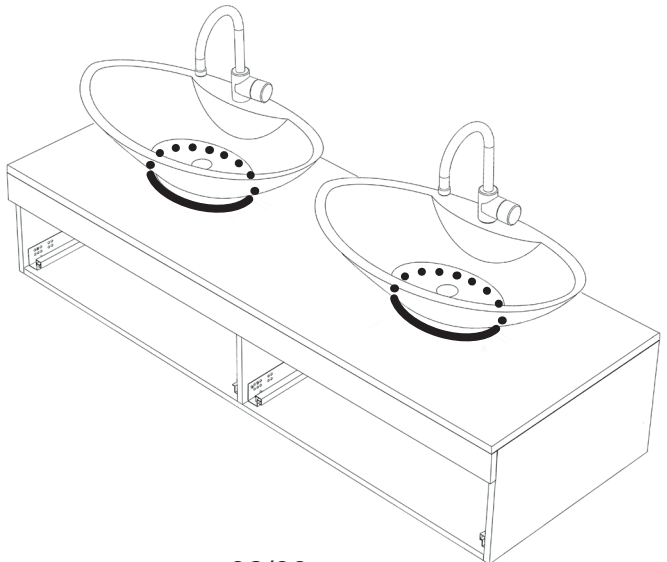

32/33




SILIKON

SILICONE


SILICONA

نوكيليس


# PEGASUS

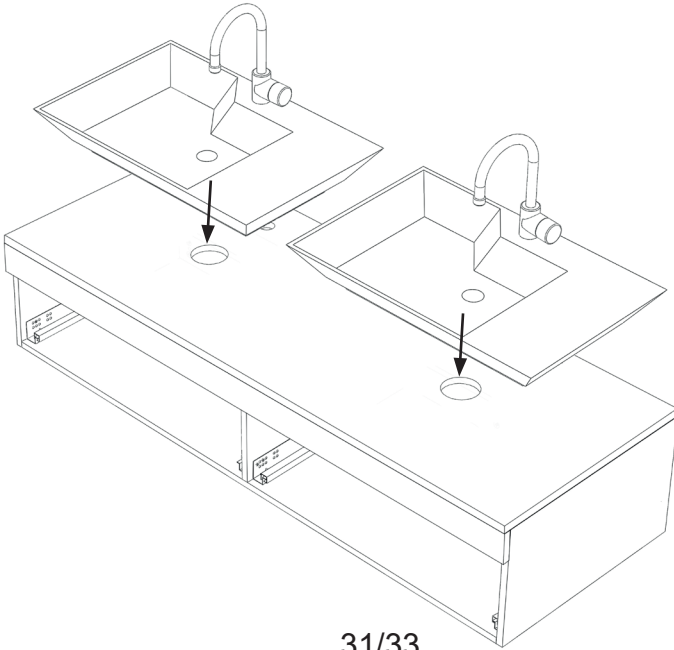

31/33

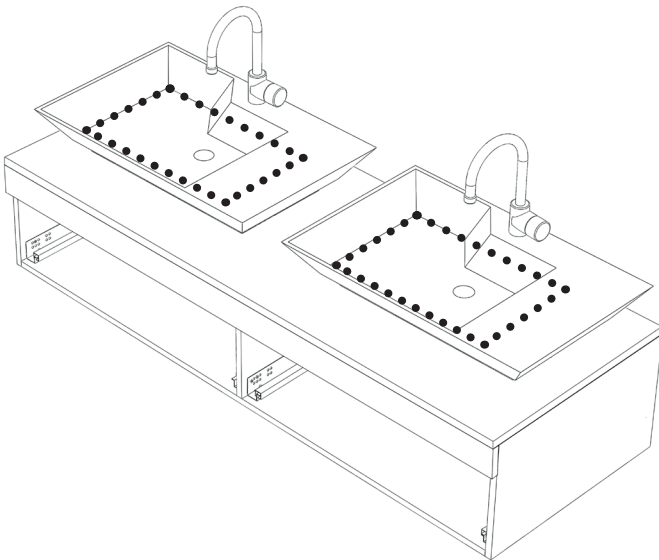

32/33



SILIKON  
SILICONE  
SILICONA

نوكيليس

