

RIO 650

A181

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL

LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES

ت ا م ي ل ع ت




41x
WA 020




41x
WA 021




26x
WA 022




4x
WA 023



2x
WA 024




2x
WA 025




2x
WA 026



2x
WA 027



2x
WA 028

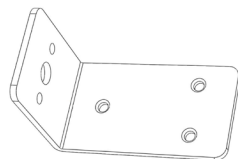

6x
WA 030






1x
WA 001




1x
WA 002

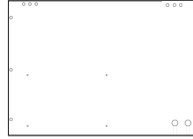

1x
WA 003



1x
WA 004



2x
WA 005




1x
WA 006



2x
WA 007



2x
WA 008



1x
WA 009




2x
WA 010




1x
WA 011



1x
WA 012



1x
WA 013



1x
WA 014




1x
WA 015




1x
WA 016




1x
WA 017



2x
WA 018





2x
WA 019 L





2x
WA 020 R



41x

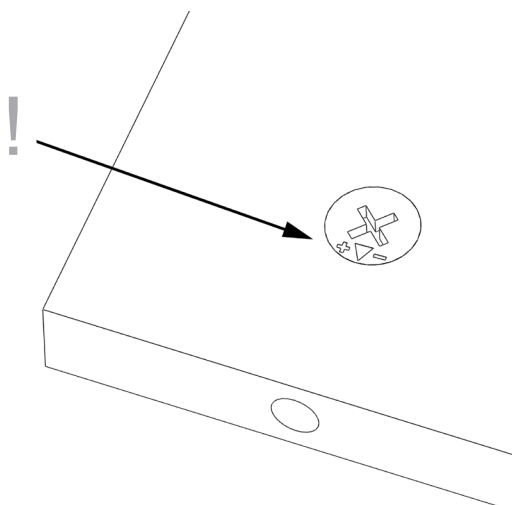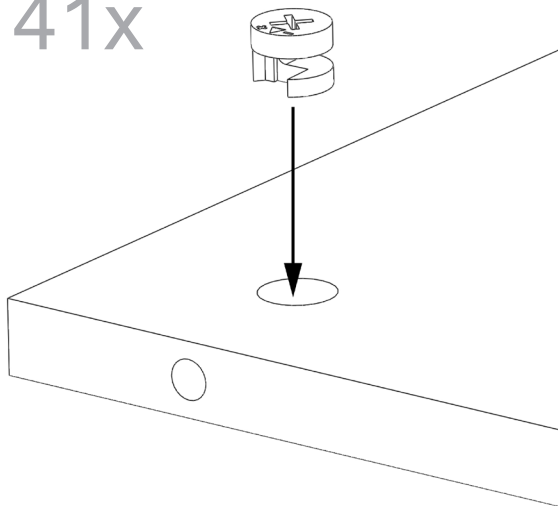



41x

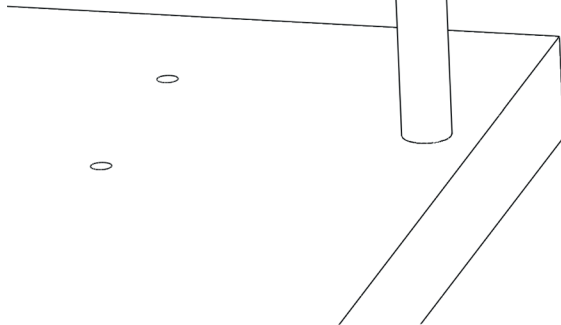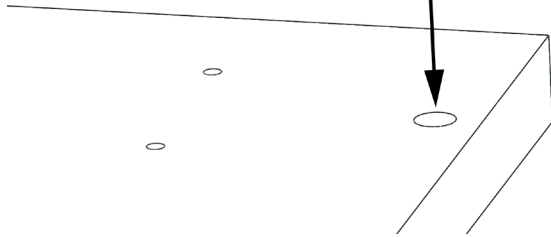

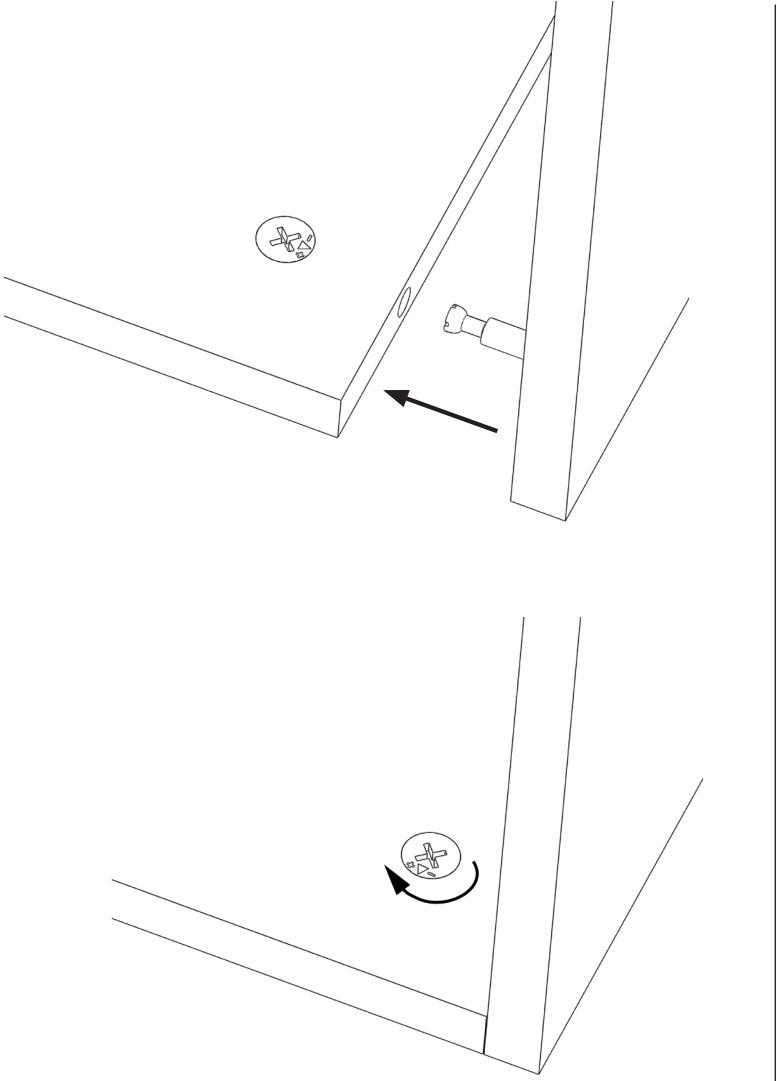

ZUSAMMENBAU

ASSEMBLY


ASSEMBLAGE

ASAMBLEA

MONTAJ

MONTAGEM

تجميع




4x
WA 030

WA 001


WA 004



1/30

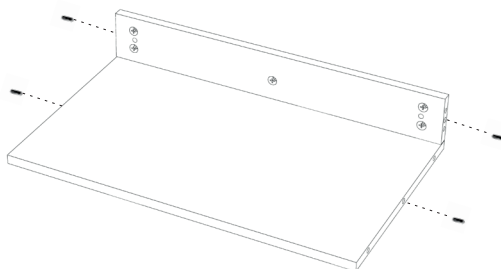

2/30

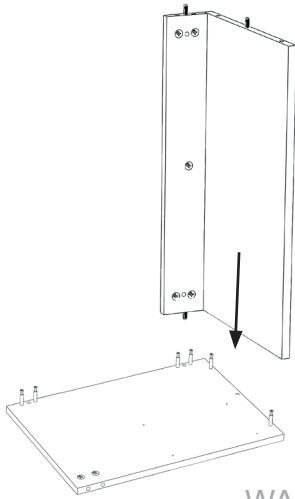


WA 002

3/30



WA 005

4/30

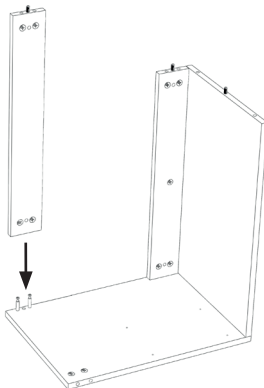


5/30




2x
WA 030


WA 003

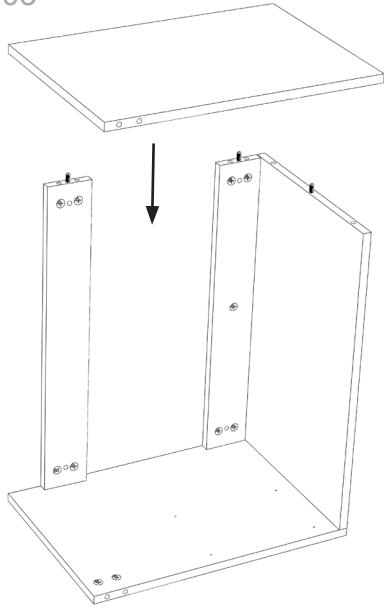


6/30





WA 006

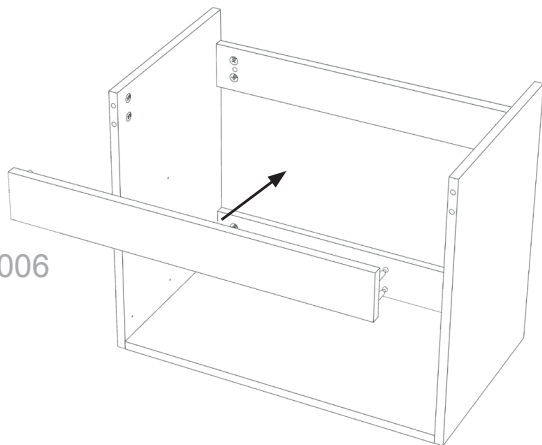


7/30

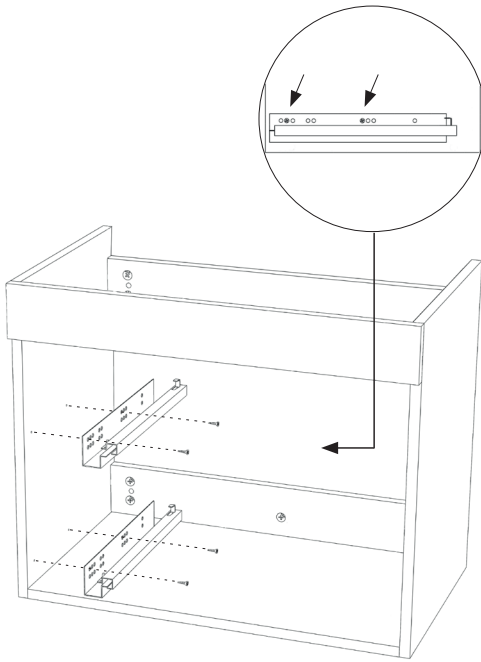


8/30

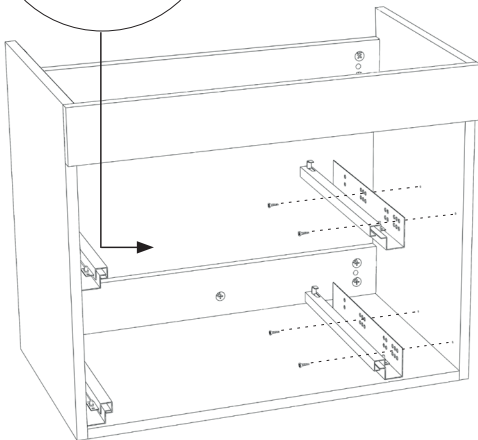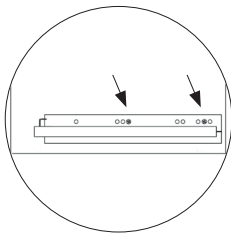


9/30




8x
WA 022



2x
WA 019 L




2x
WA 020 R



4x
WA 023


2x

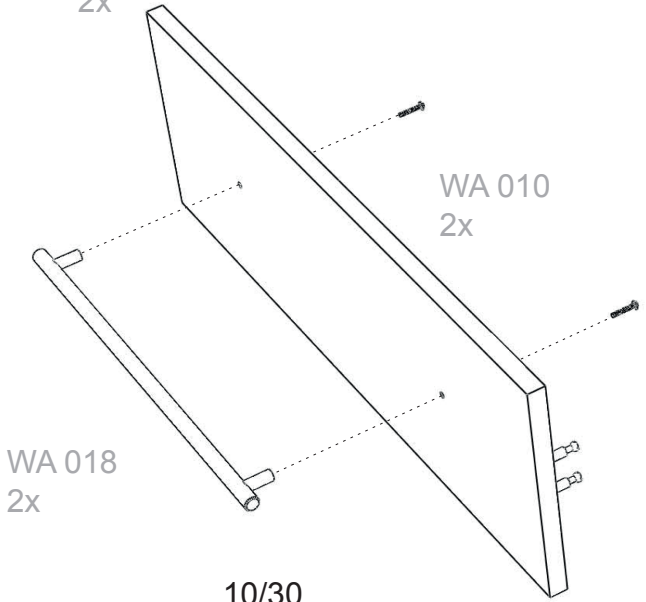


WA 010
2x

WA 018
2x


10/30

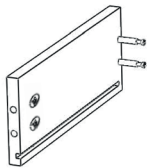

WA 007

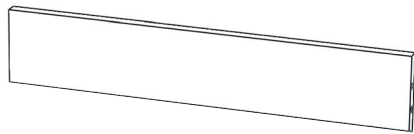


WA 009




WA 008

11/30

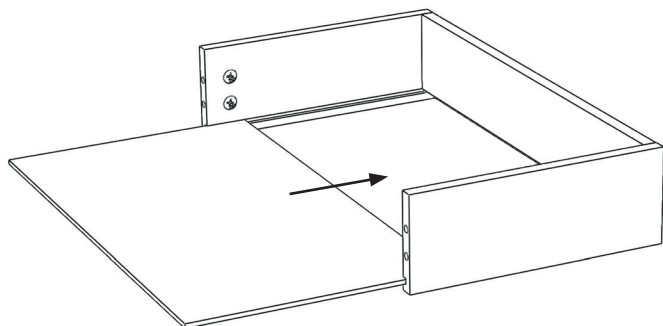


WA 014



12/30

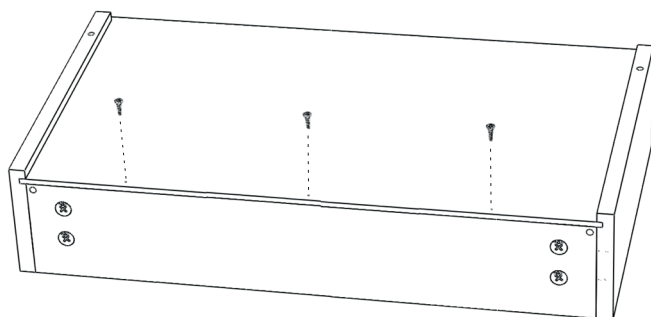

13/30




3x
WA 022

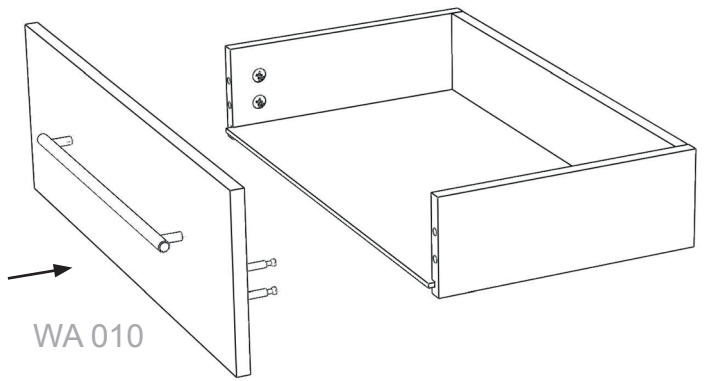



WA 010


14/30

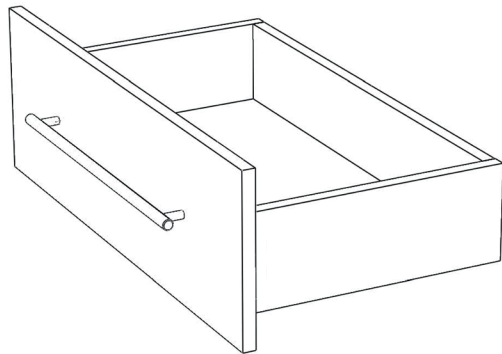

WA 007

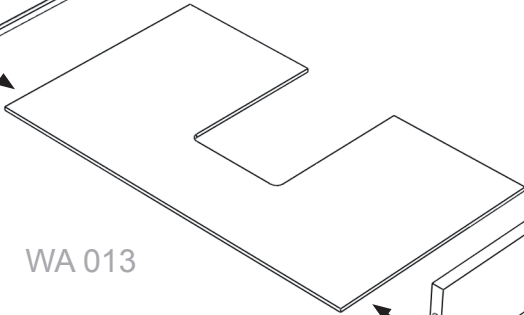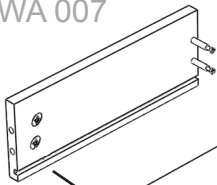




WA 013

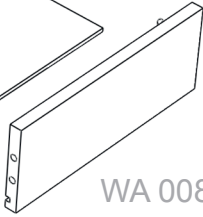


WA 008

15/30

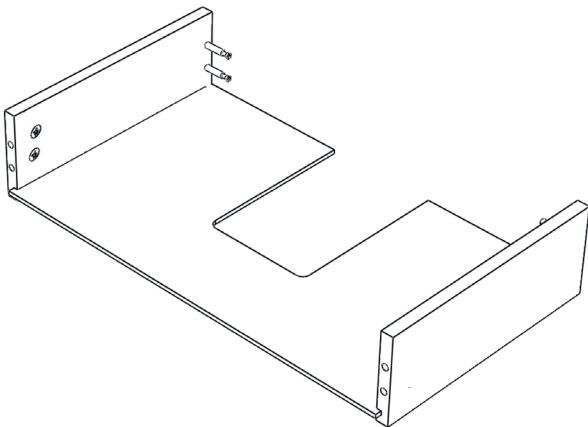


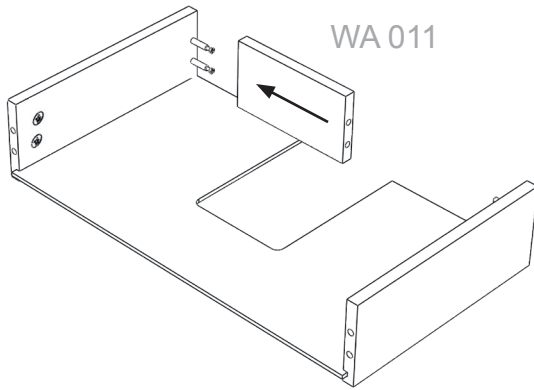


16/30

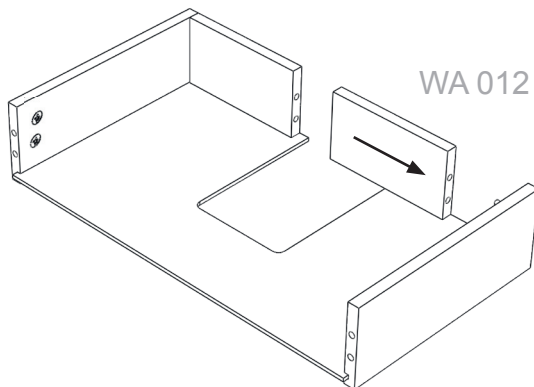

17/30

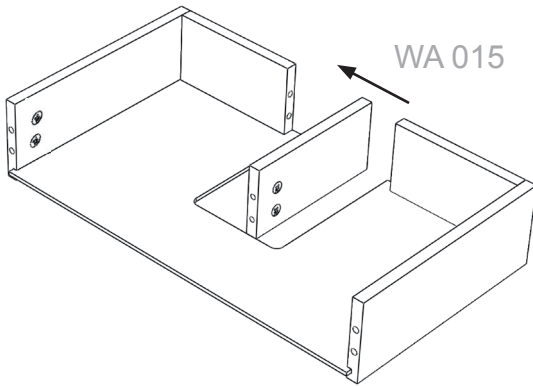


18/30

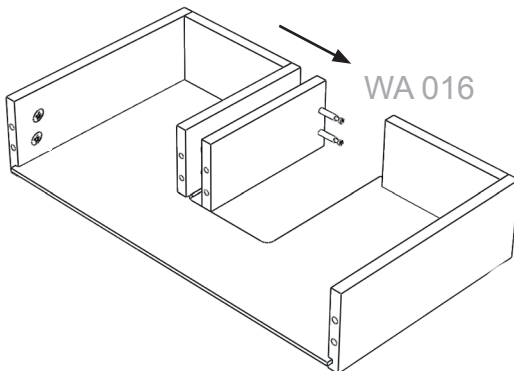


19/30



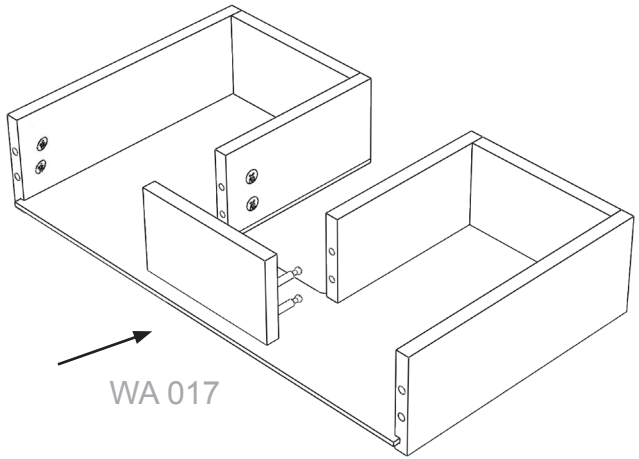


WA 017


20/30





5x
WA 022



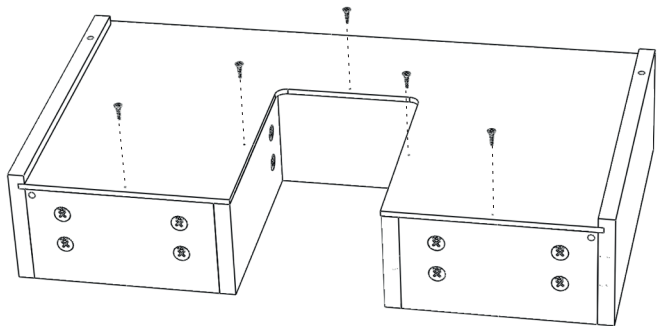



21/30

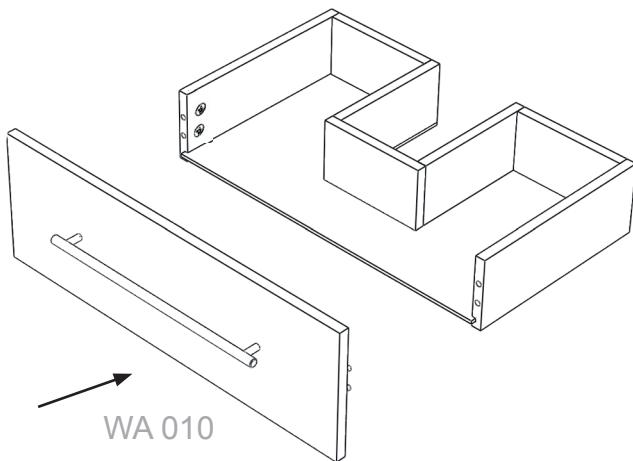


22/30

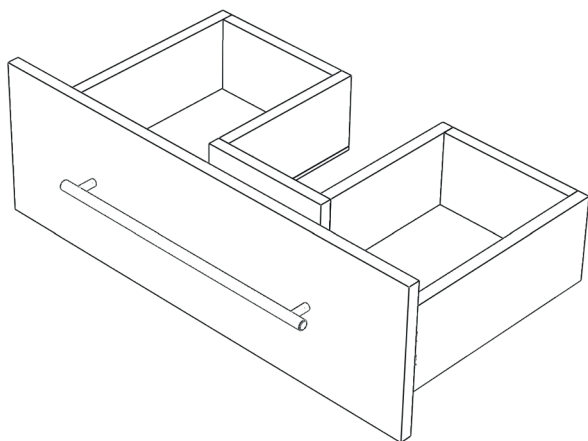

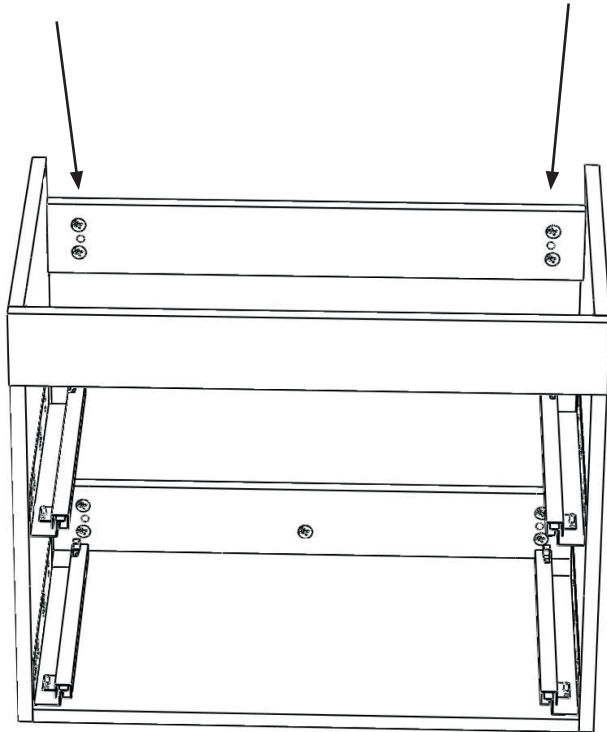


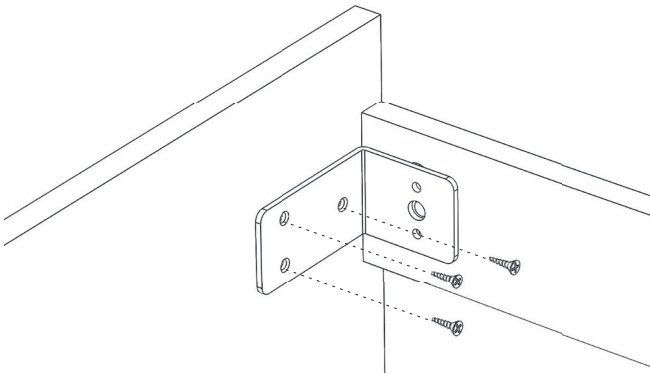


23/30



6x
WA 022



2x
WA 028

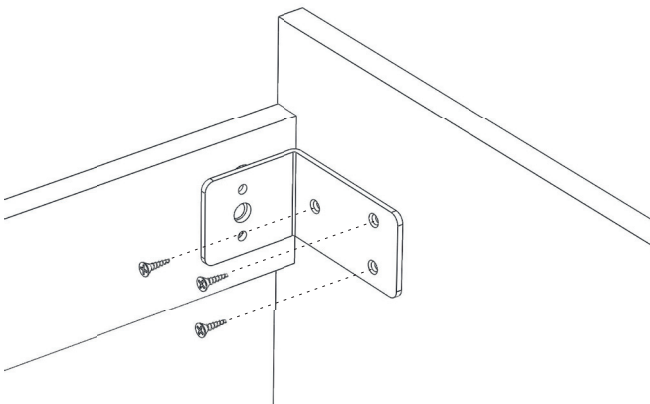

24/30

WANDMONTAGE

WALL MOUNT




MONTAGE AU MUR

DE MONTAJE EN PARED


DUVARA MONTAJ


PAREDE MONTAGEM

لجج رادج




2x
WA 025

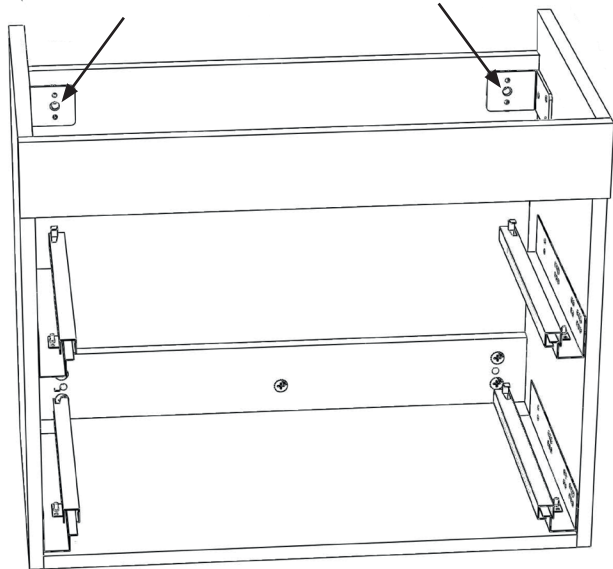

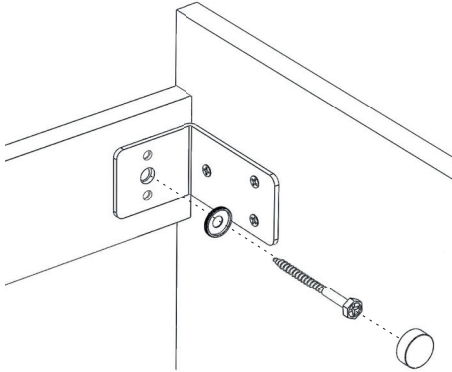

25/30

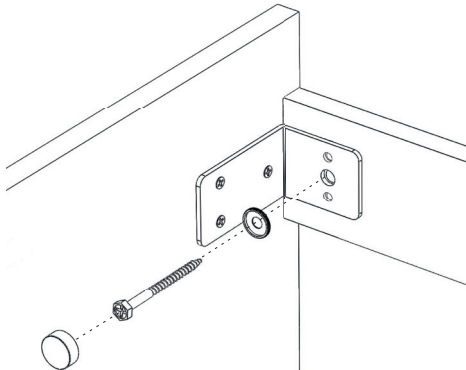

26/30





2x
WA 024




2x
WA 026




2x
WA 027

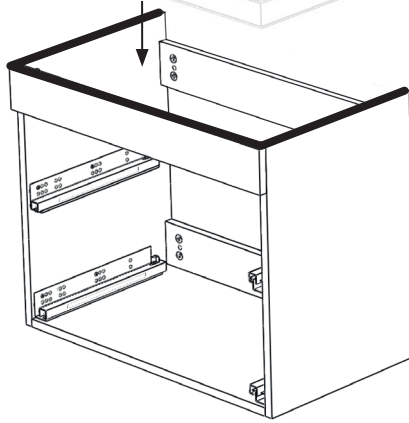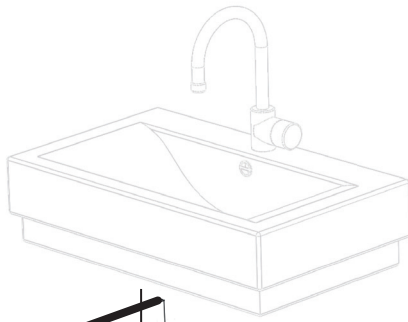

27/30

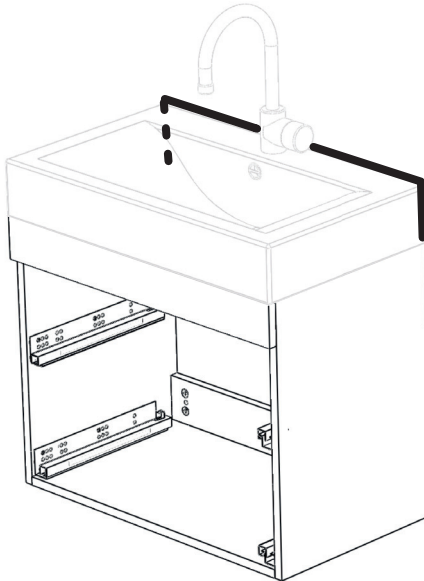

28/30






SILIKON




SILICONE

SILICONA

نوك يلى س

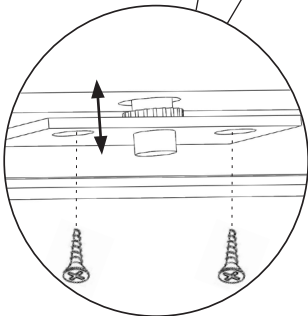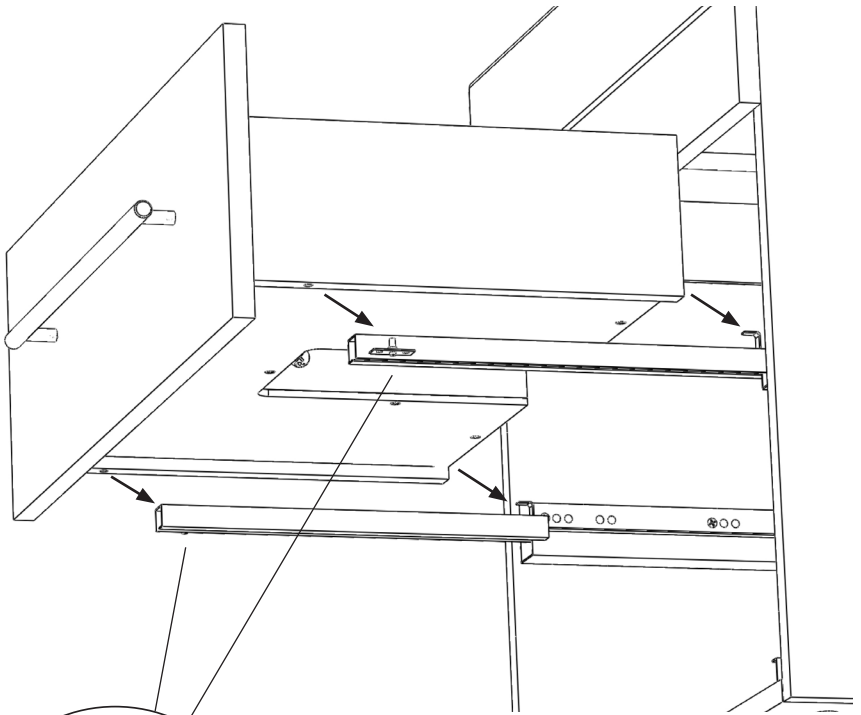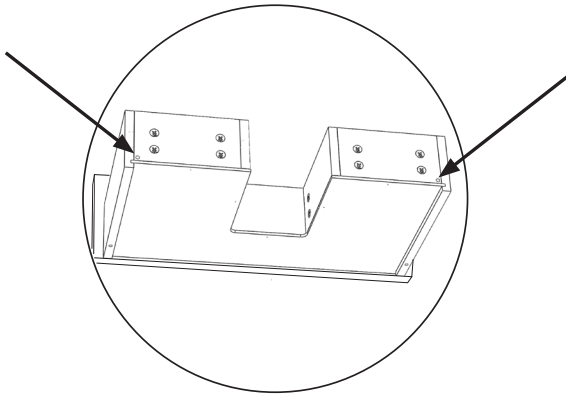

29/30

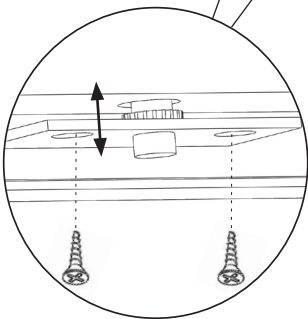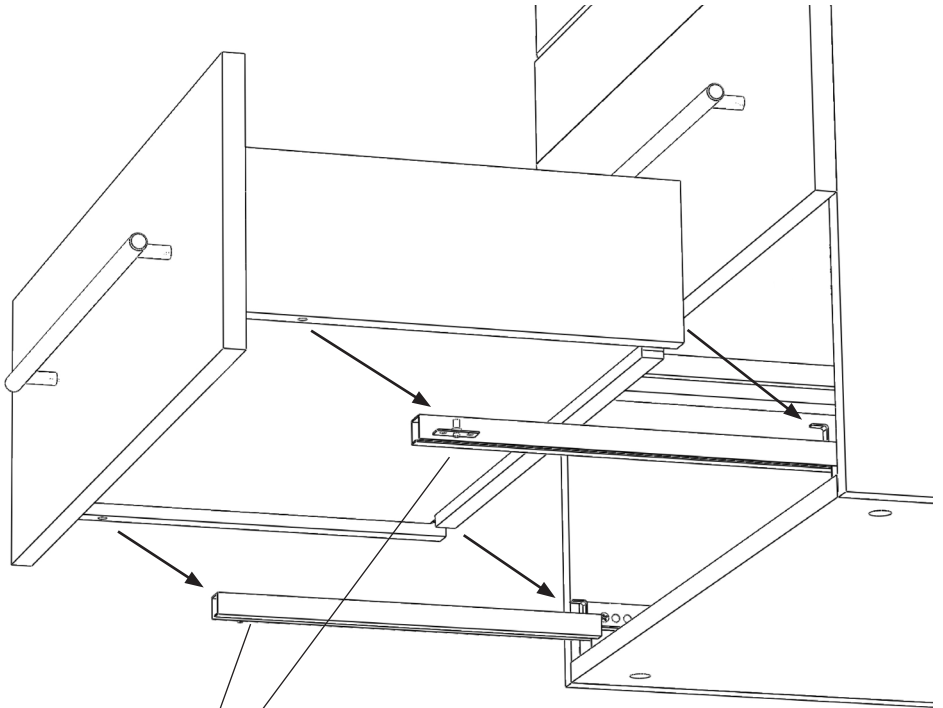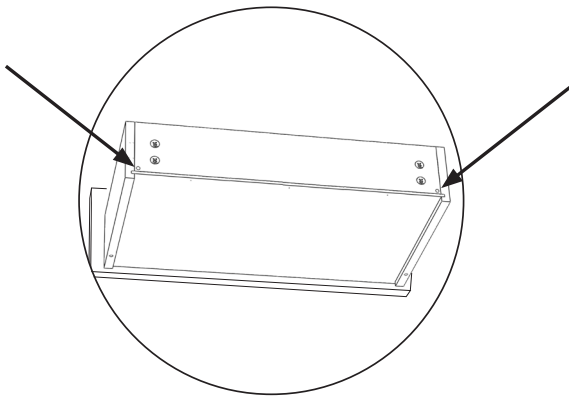

30/30