

HOMELINE 605-606

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL


LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES

تامی لعت

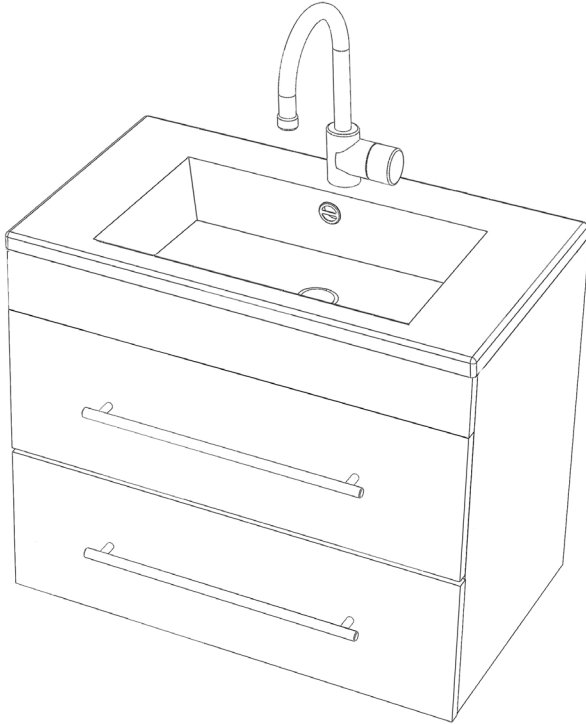


40x
WA 020




40x
WA 021




30x
WA 022




4x
WA 023



4x
WA 024



4x
WA 025

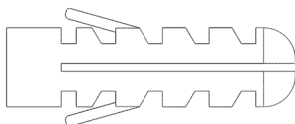


4x
WA 026



4x
WA 027




2x
WA 028

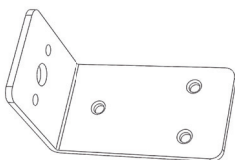


6x
WA 030




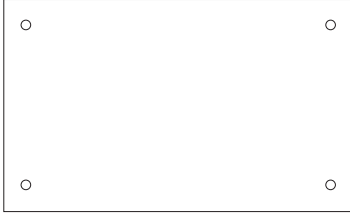

1x
A 001

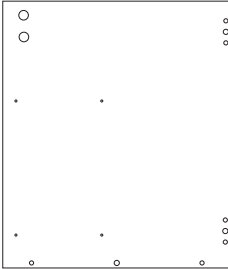

1x
A 002

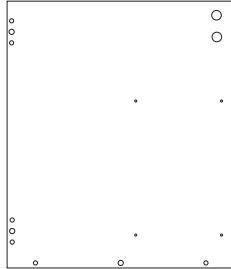


1x
A 003



1x
A 004



2x
A 005



2x
A 006



2x
A 007



2x
A 008



1x
A 009



1x
A 010



1x
A 011




1x
A 012



1x
A 013




1x
A 014




1x
A 015




1x
A 016



2x
A 017




2x
A 018 L




2x
A 019 R

40x


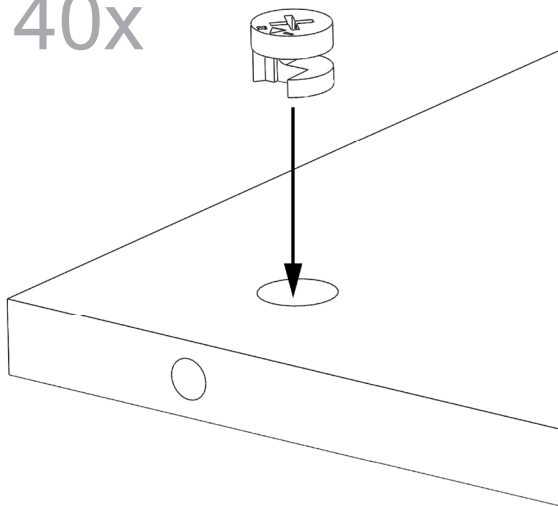




!

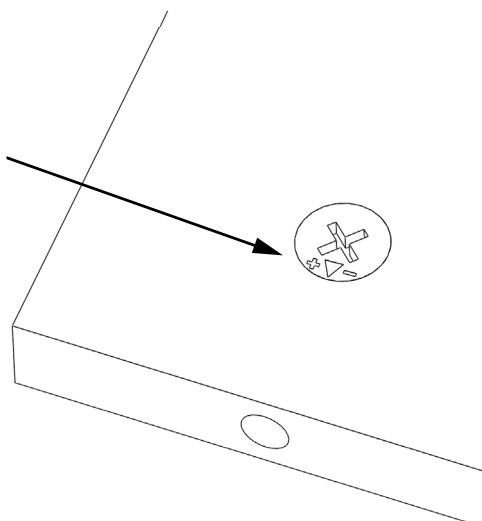



40x

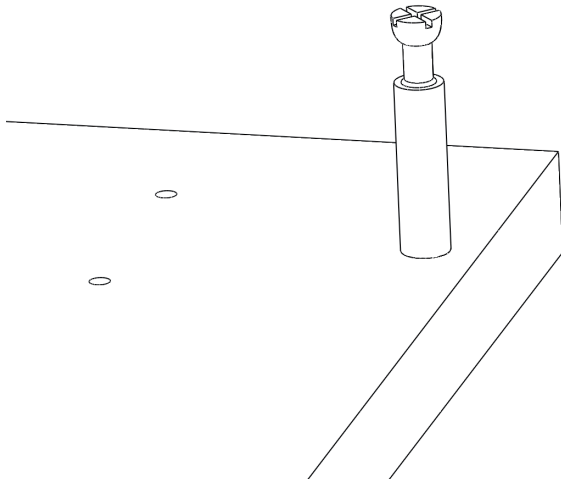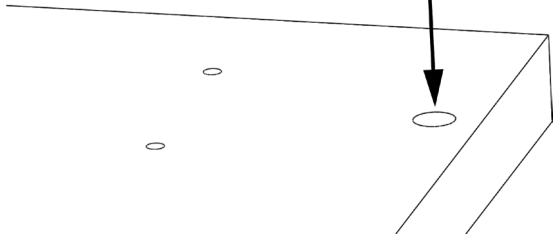

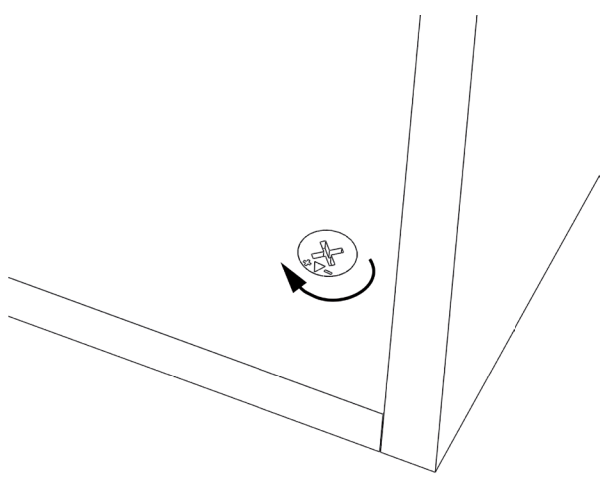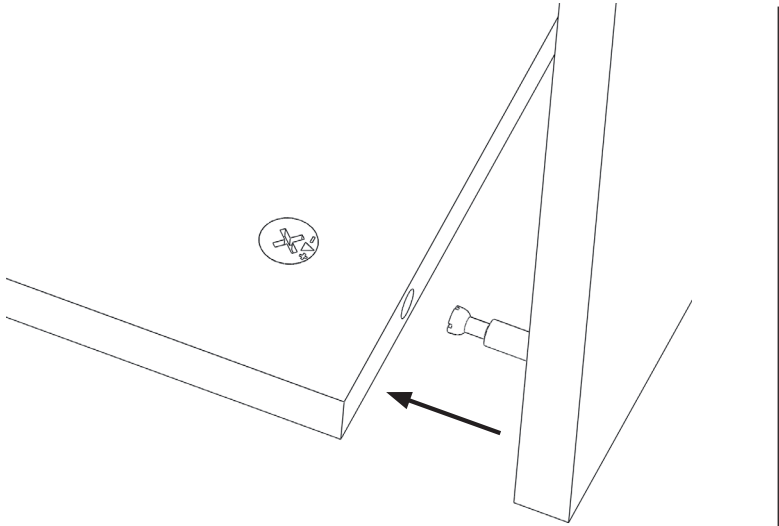

ZUSAMMENBAU

ASSEMBLY

ASSEMBLAGE

ASAMBLEA

MONTAJ

MONTAGEM


تجميع

A 005
2x




1/30

A 001

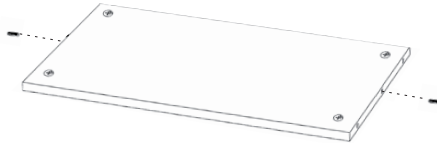


2/30

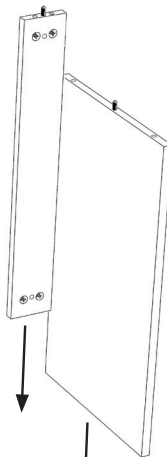


A 002

3/30




6x
WA 030

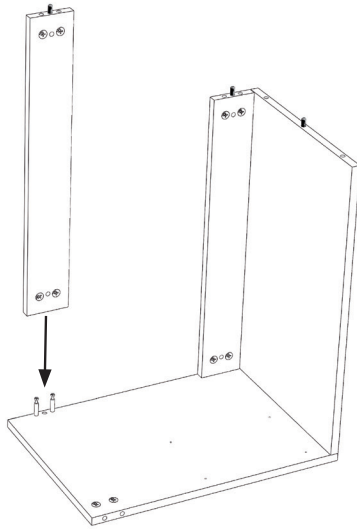



4/30

A 003

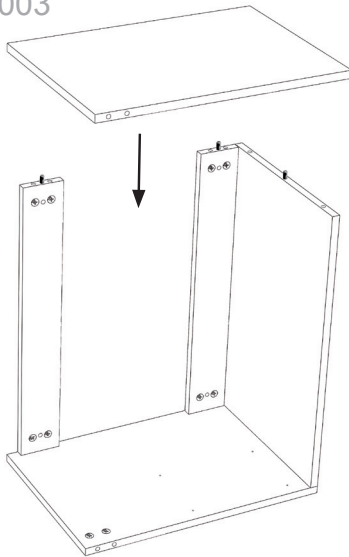


5/30









A 004

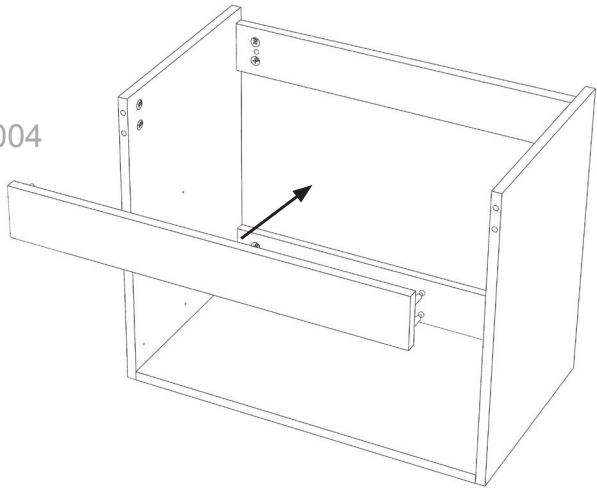


6/30

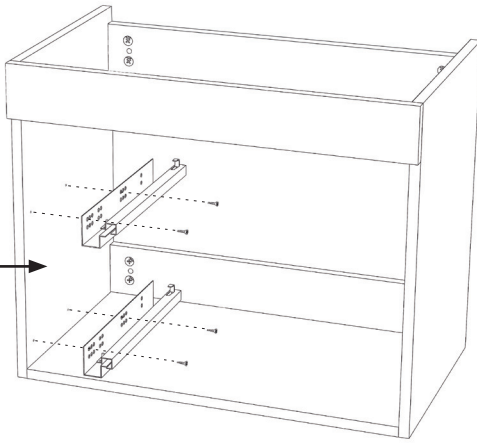


7/30

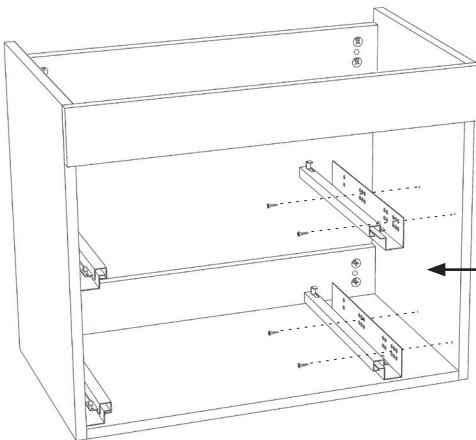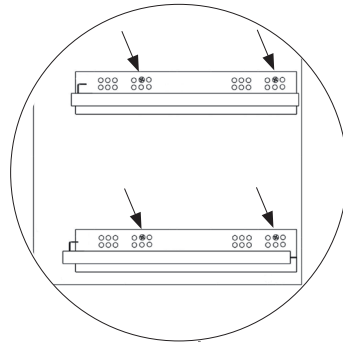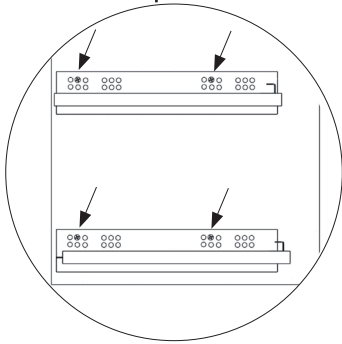


7/30




8x
WA 022



2x
A 018 L







A 019 R




4x
WA 023

2x

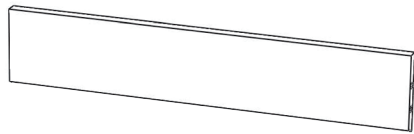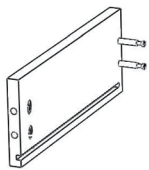
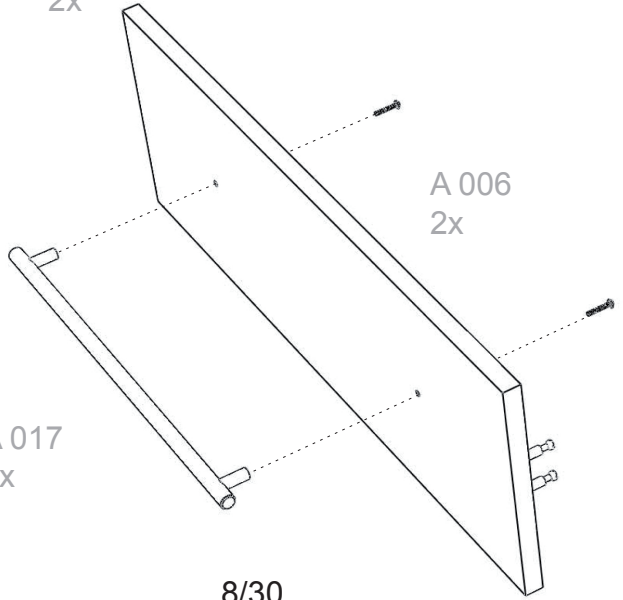


9/30

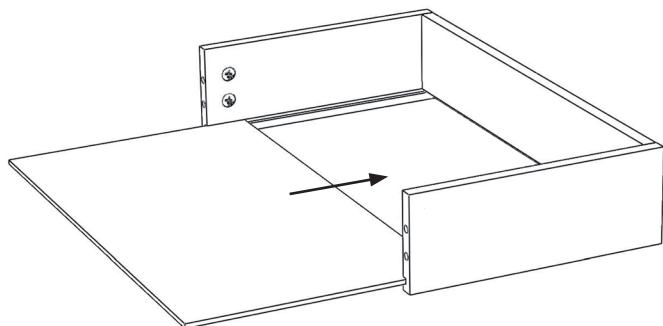


A 016


10/30

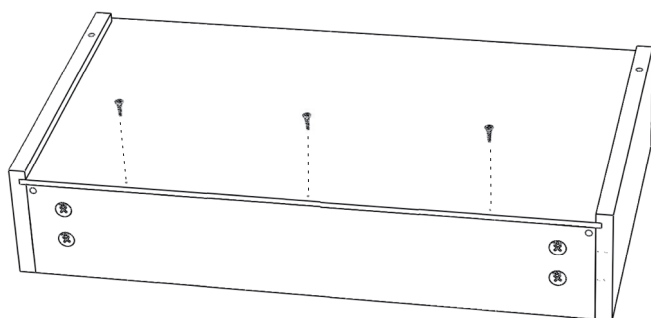


11/30





3x
WA 022

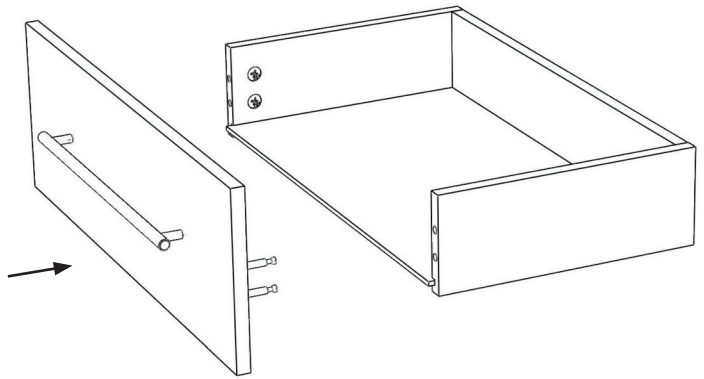


12/30

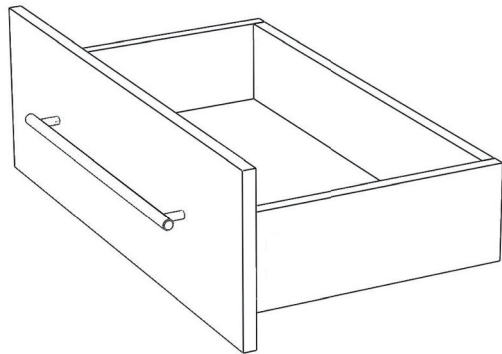

A 007

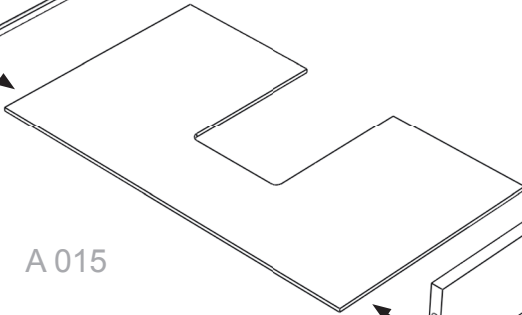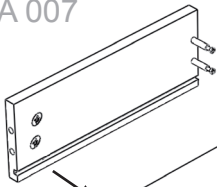




A 015

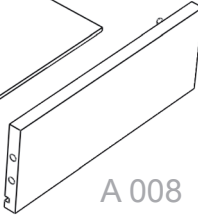


13/30

A 008

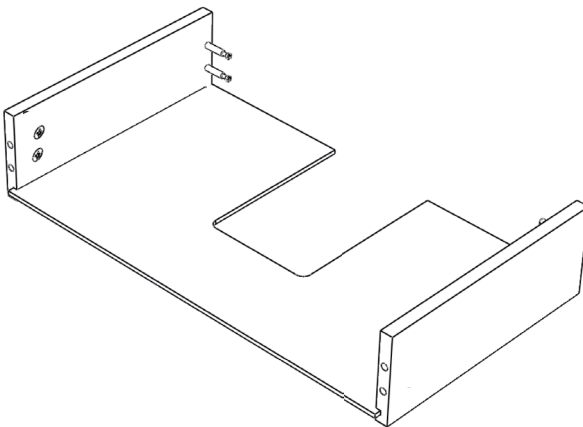


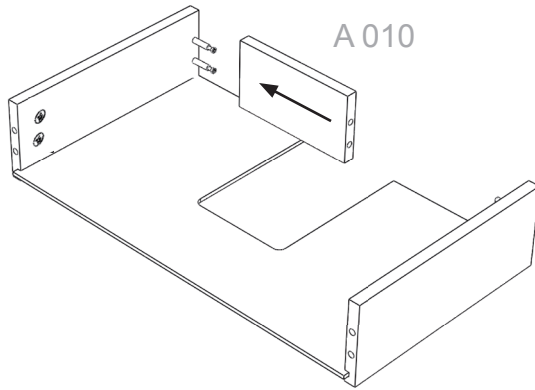


14/30

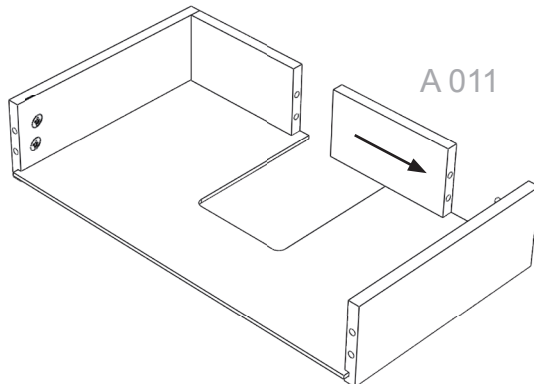


15/30


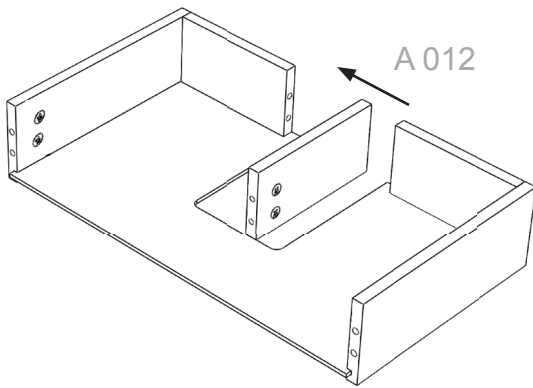


16/30

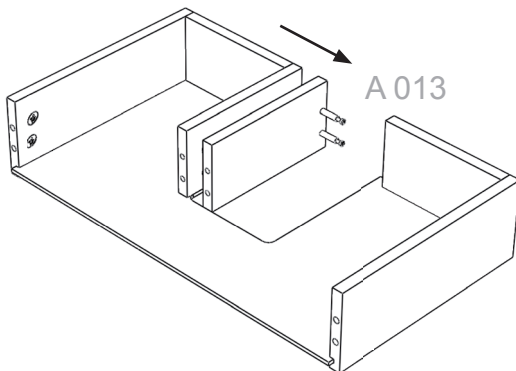

17/30



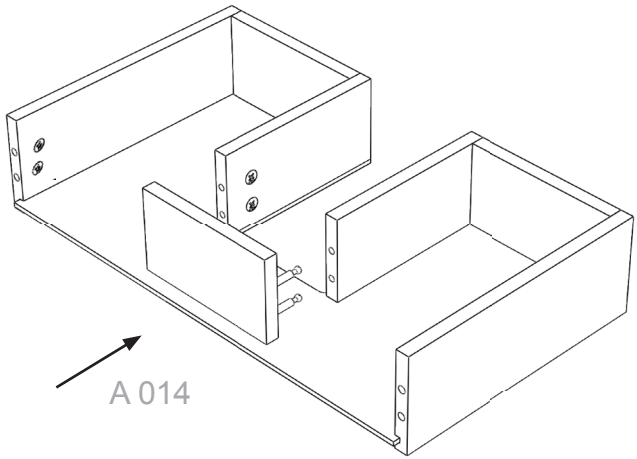


A 014


18/30





5x
WA 022



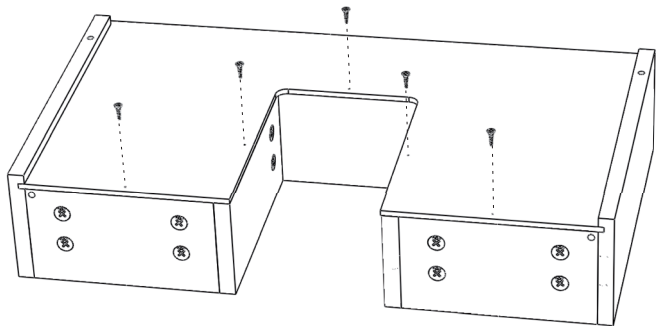



19/30

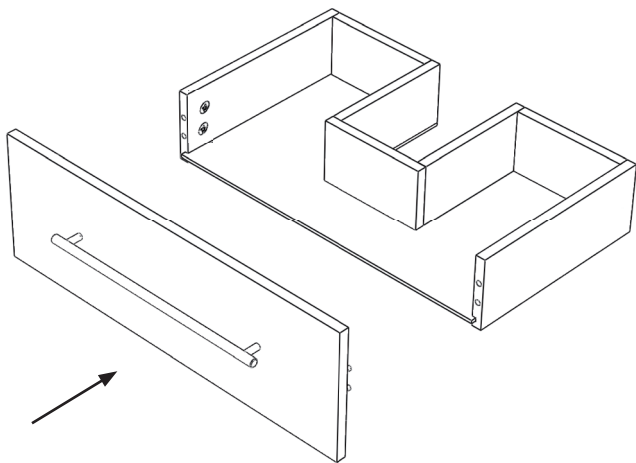


20/30

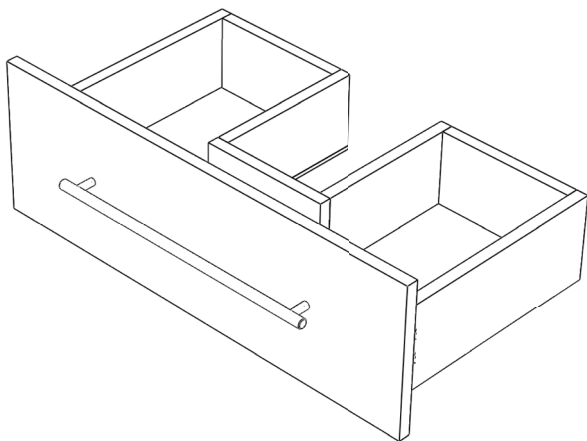

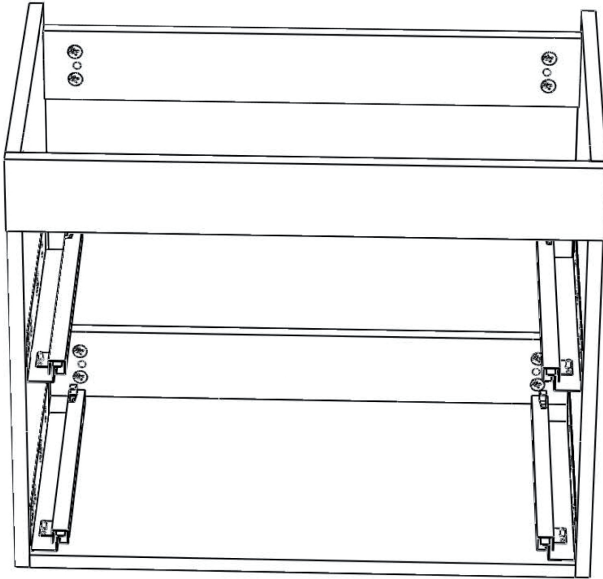


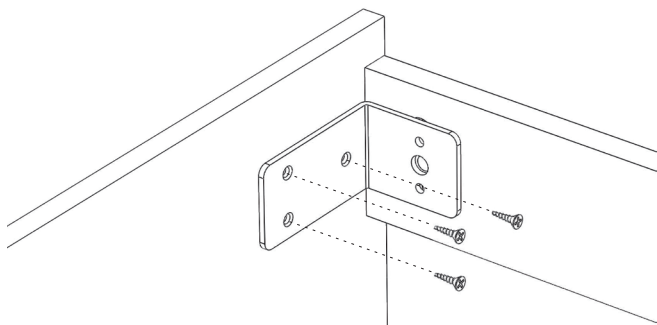


21/30

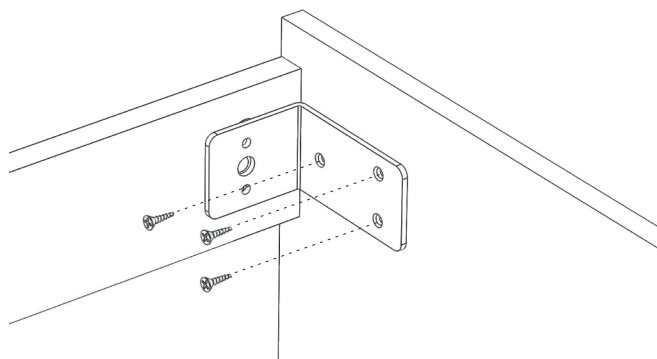

22/30






6x
WA 022




2x
WA 028


WANDMONTAGE
WALL MOUNT
MONTAGE AU MUR
DE MONTAJE EN PARED
DUVARA MONTAJ
PAREDE MONTAGEM

لبج رادج




4x
WA 025

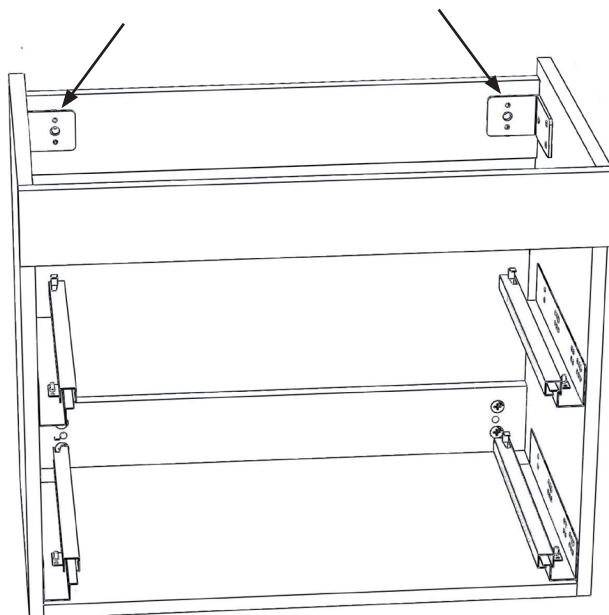


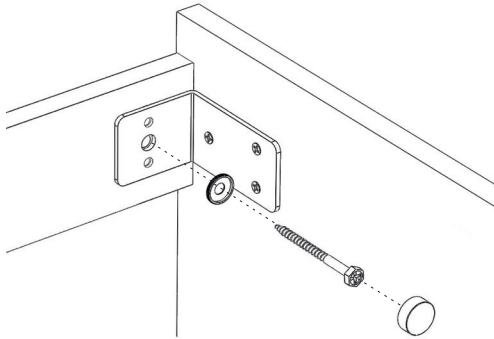

23/30

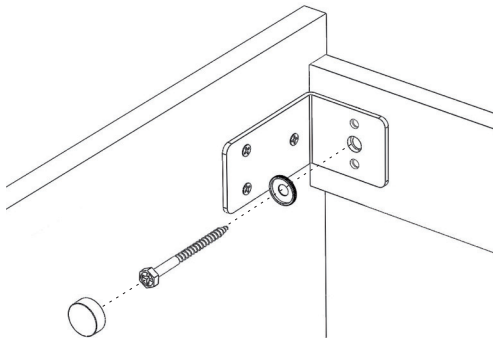

24/30




2x
WA 024



2x
WA 026



2x
WA 027




2x
WA 024




2x
WA 026




2x
WA 027

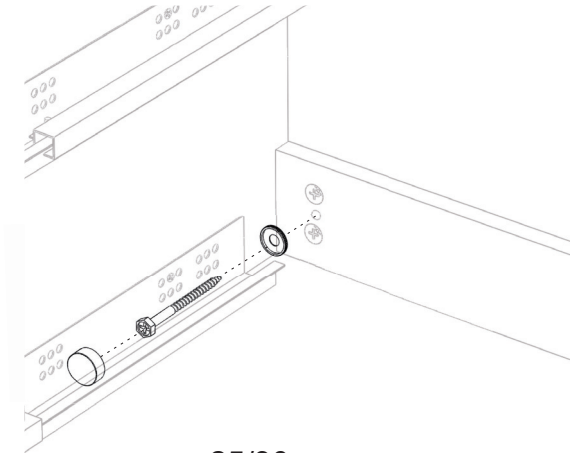


25/30

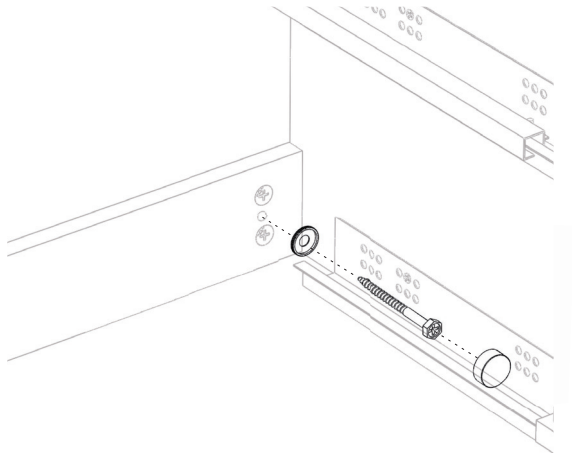


26/30

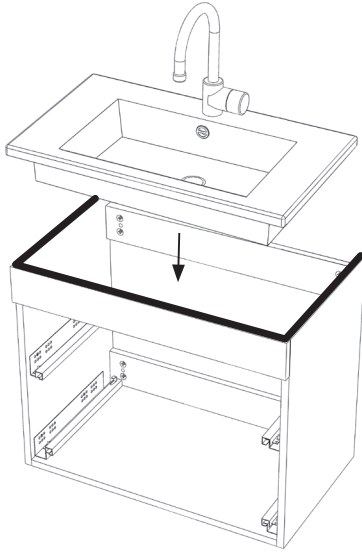

27/30

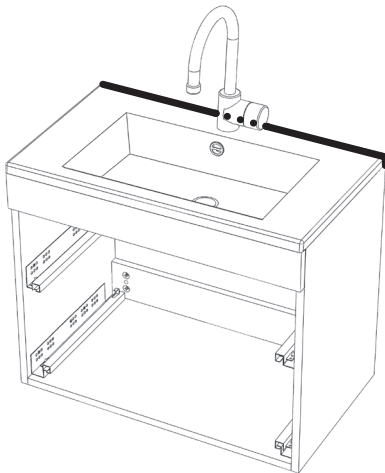

28/30



SILIKON
SILICONE
SILICONA

نوكييليس

